


# HONDAVAC™

Clean up dry spills and debris inside your vehicle with the in-car vacuum system.  
*Available on Touring Elite.*

## How It Works

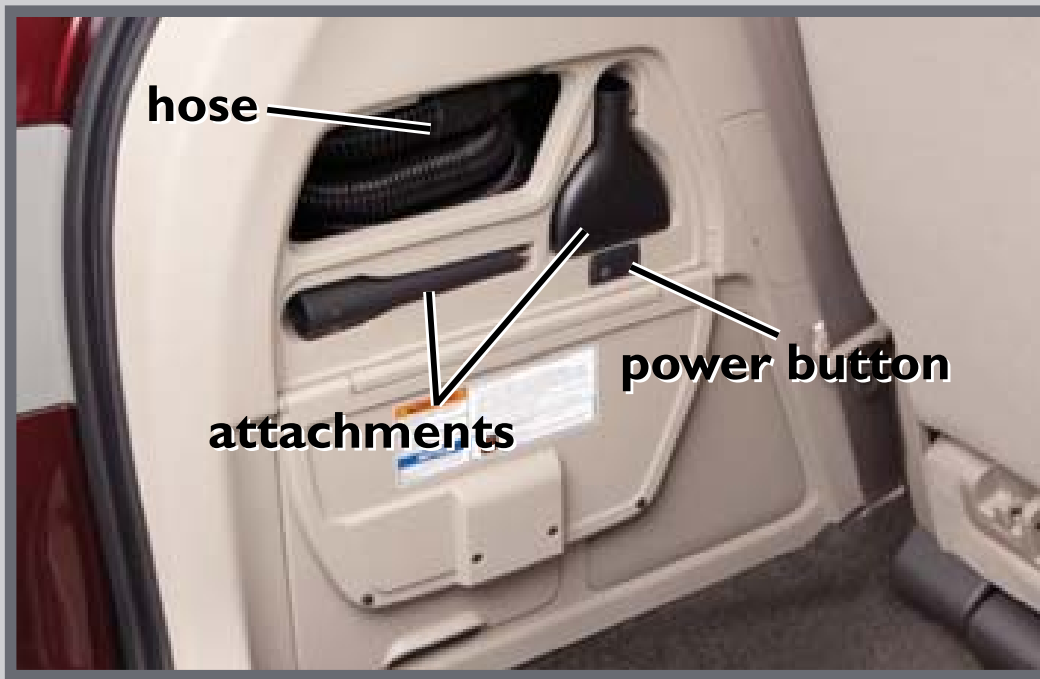

1. Make sure the vehicle is in Park (P). Set the power mode to Accessory, or start the engine.
2. Open the vacuum storage lid in the driver's side rear cargo area.
3. Pull out the vacuum hose, and install one of the attachments if desired.
4. Press the power button and begin to vacuum (dry use only).

### Accessory mode operation

- After 7 minutes, an intermittent beep begins to sound as a time limit alert.
- After 8 minutes, a beep sounds, PWR SAVE comes on, and the vacuum turns off. You must start the engine if you want to continue using the vacuum. The vacuum will restart after the engine has been running for about one minute.

### Engine on operation



Make sure you are using the vacuum in a well ventilated, open area to minimize the likelihood of carbon monoxide exposure.

See your Owner's Manual for instructions on canister or bag removal.