


DRIVING POSITION MEMORY SYSTEM (DPMS)


Store driver's seat and side mirror positions into memory for each corresponding remote transmitter (1 or 2).

Programming the DPMS

1. Turn the vehicle on. Shift into Park (P).
2. Adjust the seat and outside mirrors to your preferred positions.
3. Press SET. You will hear a beep.

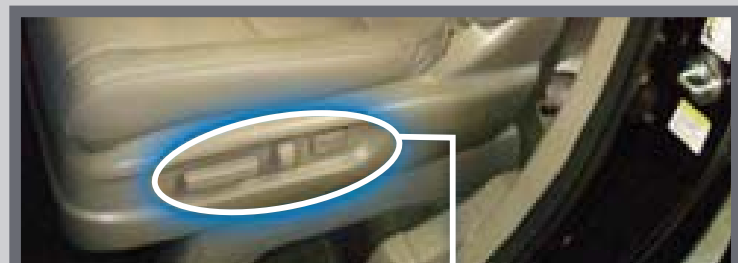

4. Within 5 seconds, press the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.

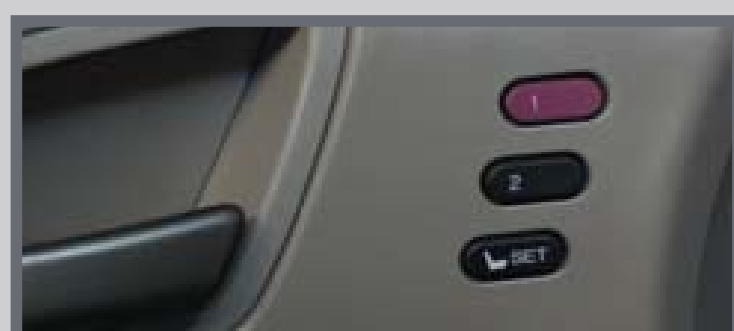

Notes:

- Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.
- Lumbar positions cannot be stored.

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Lock Operation



Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in On mode. See your Owner's Manual for complete setting options.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Door Setup.
3. Select Auto Door Lock or Auto Door Unlock.
4. Select from the options.
5. Press BACK to exit the menu.



SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

Adjusting Vehicle Settings



Press SETTINGS to enter the Settings Menu. Use the interface dial to make and enter selections.

Choose from the available options:



Navi Settings

Change navigation, routing, and map settings.

Camera Settings

Change LaneWatch settings and rear camera guidelines.

Vehicle Settings

Change lighting and door setup, and more.

System Settings

Adjust the display, clock, system language, and more.

Phone Settings

Pair a phone, change call options, and more.

Info Settings

Import wallpaper and select clock type.

Audio Settings

Adjust the sound, and change various settings for audio modes.

Rear Ent Settings

Change settings for the rear entertainment system.