REAR ENTERTAINMENT SYSTEM (RES)


Rear passengers can enjoy a different entertainment source than front passengers.

Front System Operation



Press REAR AUDIO to display and control rear audio from the front.

Select an audio icon from Rear Audio Source.

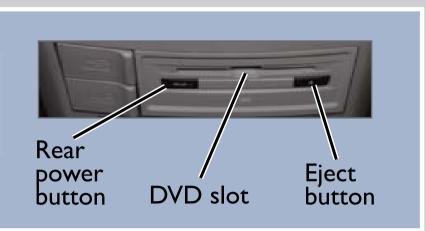

Front Controls

- I. Press REAR POWER to turn the system on.
- 2. Press REAR AUDIO.
- 3. Use the touchscreen or front audio controls to choose a media source for the rear system.
- 4. Press FRONT AUDIO to return to the front audio source.

Rear System Operation



Press the release button to detach the remote control, if desired.

To open, press OPEN to release the screen.*



Pull down the bottom edge of the screen, and extend it until it locks into place.



To close, fold the screen back into the ceiling until you hear a click to lock it into place.

*Elite only

Rear Controls

- I. Make sure REAR POWER is on in the front audio controls.
- 2. Open the overhead screen and lock it into place. Retrieve the wireless headphones.
- 3. On the remote control, press DVD/AUX, CD, XM, or FM/AM.
- 4. Press (\triangle) (∇) (\triangle) to navigate menu options. Press ENTER to make a selection.

Headphone Operation

Your vehicle comes with two sets of wireless headphones. Pivot the earpieces to turn them on or off. Wireless headphones work only in the rear seats.





