## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



## Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



Anti-Lock Brake System (ABS)



Low brake fluid, Brake system



Variable Torque Management (VTM-4) (4WD only)



Low oil pressure



Malfunction lamp (check engine light)



Supplemental Restraint System (SRS)



Vehicle Stability Assist® (VSA)



Daytime Running Lights (DRL)



Tire Pressure Monitoring System (TPMS)



Power tailgate\*

## Condition Indicators Action is needed by driver



Parking brake on:

Release



Low fuel: Refill



Door/Tailgate open: Close door(s) / tailgate



Low tire pressure:



Add air



Seat belt reminder: Fasten seat belt(s)

Maintenance Minder™: Make dealer appointment



Starter system: Hold ignition switch in START (III) for up to 15 seconds



Immobilizer (blinks):

Use other vehicle key and see dealer



A/T temperature (4WD only): Pull over and let engine idle



VTM-4 (blinks):

Pull over and let engine idle

## On/Off Indicators



PASSENGER AIRBAG **OFF** (located on center panel)



Fog lights on\*



SIDE AIRBAG OFF



Exterior lights on





Turn signals/hazards on



VSA OFF



High beams on



CRUISE CONTROL on

CRUISE MAIN on



Fuel economy on