


DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat and side mirror positions into memory for each corresponding keyless remote transmitter (1 or 2).

Programming the DPMS

1. Turn the ignition switch to ON (II). Shift into Park (P).

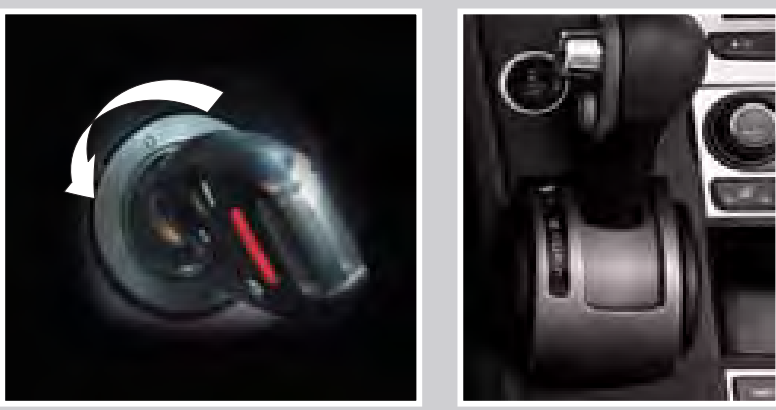

3. Press SET. You will hear a beep.



2. Adjust the seat and outside mirrors to your preferred positions.



4. Press the memory button corresponding to the remote (1 or 2) you are using within 5 seconds. You will hear two beeps.



Note: Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.

AUTO DOOR LOCKS

Program how and when the vehicle doors and the tailgate automatically lock and unlock.

Default Lock/Unlock Setting



Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).

Programmable Auto Door Lock/Unlock Settings


Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

AUTO DOOR LOCK			AUTO DOOR UNLOCK		
Auto Lock			Auto Unlock (all doors)		
Turn off Auto Lock			Auto Unlock (only driver's door)		
	Operate manually		Turn off Auto Unlock		
				Operate manually	


Programming the Auto Door Unlock Setting

Press either Info (▲/▼) button on the steering wheel to toggle to the Customize Settings display on the MID, then press SEL/RESET to enter the menu.

1. Select CHANGE SETTING.

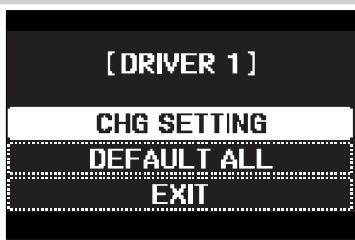

4. Select SHIFT TO P.

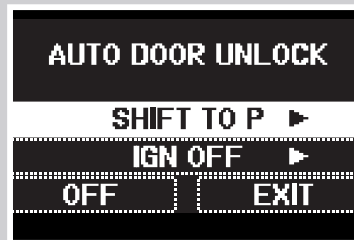


2. Select DOOR/WINDOW SETUP.



5. Select ALL DOORS.



3. Select AUTO DOOR UNLOCK.

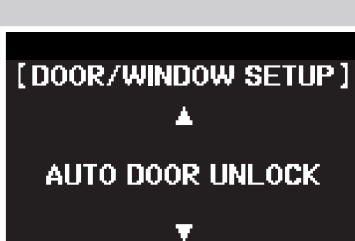

6. Select EXIT to save the setting and exit the menu.

