


TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.


How It Works

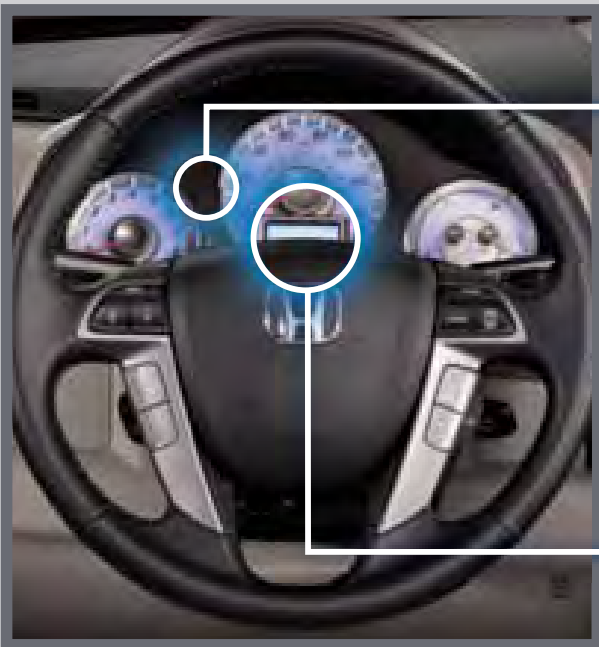

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



A message also appears in the MID, indicating which tire has low pressure.

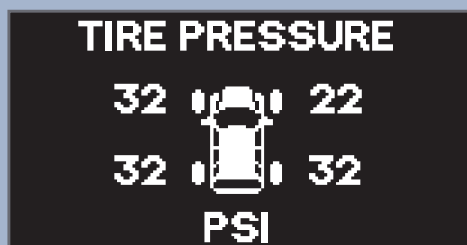

Use the Info (▲/▼) buttons on the steering wheel to scroll to the tire pressure monitor to view readings.

What to Do

1. Visually inspect the tires for damage.
2. Check the MID to see which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

