

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

Note: On vehicles with MID, a message also appears on the display. Press the Info button on the steering wheel to view the tire pressure monitor.

TPMS

If the TPMS indicator* appears, there may be a problem with the system. See your dealer.

**on vehicles without MID*

What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

