## **VOICE RECOGNITION**

To keep your eyes on the road and hands on the wheel, use the Navi Talk or HFL Talk button to say voice commands to operate certain vehicle features. Available on vehicles with navigation.

## Voice Control System

The voice control system uses the steering wheel buttons and the ceiling microphone.






**HFL Talk button:** Give HFL commands or answer incoming calls.

Navi Talk button: Say navigation, audio, and climate control commands.

Navi Back button: Cancel a command or return to the previous screen.

**HFL Back button:** End a call, go back to \_\_ the previous command, or cancel an operation.

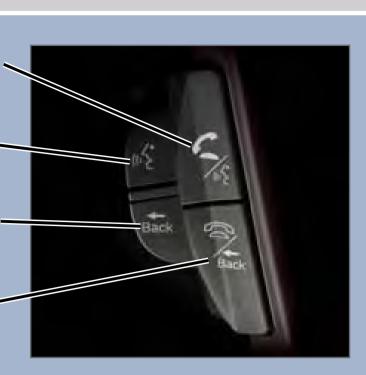

# Voice Command Tips

- Press and release the HFL or Navi Talk button, wait for a beep, then say a command.
- For a list of available HFL commands, press and release the HFL Talk button and say "Hands-free help."
- For a list of available navigation commands, press and release the Navi Talk button and say "Help." For a full list of commands, say "Information" and "Voice command help," or see your Navigation Manual. • Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling. • Close the windows.

# Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Navi Talk button before you say a command.

### (Accepted on most screens to change displays) Display map • Display menu

General Commands

- Information
- Display audio screen • What time is it?

(Accepted on Map screen)



1234 CRV BLVD., TORRANCE, CA

HONDA DEALER 1

Enter destination by:

Select a place:

(123) 456-7891

#### • Find nearest: - Honda dealer - ATM

Find Place Commands

- gas station airport - Mexican
  - hospital - bank restaurant - post office

Navigation Commands

How long/far to the destination?

(Accepted on Map screen)

- Display destination map • Display entire route
- HONDA DEALER 2 HONDA DEALER 3 HONDA DEALER 4 Entire routes

1,36ml ×

## Display Commands (Accepted on Map screen)

• Display (or hide):

- post office • Display north up/heading up Zoom in/out

- gas station

- restaurant

Display current location

Go home

- ATM



PORTOL H

TORRANCE BLVD

PERMIT

#### Radio # FM/AM htmmannation to the • Radio preset 1/2/3/4/5/6 93.1 98.7 89,3 XM channel # 100,3 102,3 106.7

Press and release the Navi Talk button before you say a command.

**EMI** 

DIENEO

#### CD play track # CD skip forward/back Auxiliary (AUX) play

• XM preset 1/2/3/4/5/6

Audio Commands

(Accepted on most screens)

• CD play

Radio on

- Setup Commands (Accepted on Setup screen) • Brightness up/down
- Volume up/down/min/max/off Guidance prompts
- min/max/normal



SICAN

97.1

SOUND

## Climate Control Commands (Accepted on most screens)

- Air conditioner on/off Rear defrost on/off
- Climate control recirculate/ fresh air Fan speed up/down
- Temperature # degrees (# = 57-87)• Temperature max hot/cold

Help Commands

(Accepted on most screens)

for current screen) Voice command help (from INFO screen - list of all available navigation, audio, and

climate control commands)

• Help (list of available commands

