


Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving. **Available on U.S. models only.**

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on.


Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver's doorjamb.

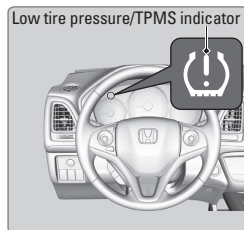

■ TPMS Calibration

Any time you inflate, change, or rotate one of more of the tires, you need to recalibrate the system.

Press and hold the TPMS button. The TPMS indicator blinks, and calibration begins.

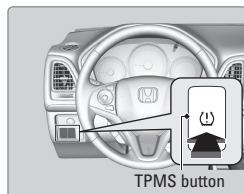

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.