

# Federal and California Emissions Warranties Parts List

Emissions warranties are state specific. Refer to the years/miles<sup>1</sup> columns below as follows:

- **A** – Minimum coverage for all vehicles in all states
- **B** – Vehicles registered and normally operated in California, Connecticut, Delaware, Maine, Maryland, Massachusetts, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont, and Washington

System Covered/Part Name	A	B	System Covered/Part Name	A	B
<b>Crankcase Control System</b>			<b>Exhaust Gas Recirculation (EGR) System</b>		
Positive Crankcase Ventilation Valve (PCV Valve)	3/36	3/50	Exhaust Gas Recirculation (EGR) Valve (including EGR Valve Position Sensor)	3/36	3/50
PCV Tube	3/36	3/50	EGR Pipe	3/36	3/50
Engine Oil Fill Cap	3/36	3/50	<b>Exhaust System</b>		
<b>Evaporative and Refueling Emissions Control System</b>			Catalytic Converters	<b>8/80</b>	<b>8/80</b>
Fuel Tank (including Fuel Tank Vapor/Liquid Separation, Vapor Control Valves, and Vapor Circulation Tube)	3/36	<b>7/70</b>	<b>Ignition System</b>		
Fuel Tank Pressure Sensor	3/36	3/50	Ignition Coils	3/36	3/50
Fuel Pressure Regulator	3/36	3/50	Crankshaft Position Sensor	3/36	3/50
Fuel Filter <sup>2</sup>	3/36	3/50	Camshaft Position Sensor	3/36	3/50
Fuel Fill Pipe	3/36	3/50	Spark Plugs	3/36	3/50
Fuel Fill Neck Restrictor	3/36	3/50	<b>OBD System</b>		
Evaporative Emission Lines and/or Hoses	3/36	3/50	Data Link Connector (DLC)	3/36	<b>7/70</b>
Evaporative Emission Canister	3/36	3/50	Malfunction Indicator Lamp (MIL)	3/36	<b>7/70</b>
Evaporative Emission Valves	3/36	3/50			
Purge Joint	3/36	3/50			

## Federal and California Emissions Warranties Parts List

System Covered/Part Name	A	B	System Covered/Part Name	A	B
<b>Fuel Injection System</b>			<b>Intake Air System</b>		
Engine/Powertrain Control Module (including Barometric Pressure Sensor and Software Upgrades)	<b>8/80</b>	<b>8/80</b>	Throttle Body (including Throttle Position Sensor and Throttle Actuator)	3/36	3/50
Injector Control Module	3/36	<b>7/70</b>	Mass Airflow Sensor	3/36	3/50
Injectors	3/36	<b>7/70</b>	Intake Manifold Assembly	3/36	3/50
Fuel Rails	3/36	<b>7/70</b>	Intake Air Resonator	3/36	3/50
Fuel Lines and/or Hoses	3/36	3/50	Intake Air Ducts	3/36	3/50
Knock Sensor	3/36	3/50	Air Cleaner Housing	3/36	3/50
Heated Oxygen Sensors	3/36	3/50	Air Cleaner Housing Cover	3/36	3/50
Air Fuel Ratio Sensors	3/36	3/50	Air Cleaner Element <sup>3</sup>	3/36	3/50
MAP Sensor	3/36	3/50	<b>Valve Control System</b>		
Engine Coolant Temperature Sensors	3/36	3/50	Rocker Arm Control Valve Assembly	3/36	3/50
Thermostat	3/36	3/50	Rocker Arm Control Oil Pressure Switch/Sensor	3/36	3/50
Accelerator Pedal Module	3/36	3/50	<b>Miscellaneous Parts</b> that are used in conjunction with the items in this list are covered. Some examples are clamps, brackets, piping, nuts, bolts, fasteners, switches, sensors, solenoids, wires, harnesses, connectors, seals, software updates, and gaskets.		
High Pressure Fuel Pump	3/36	<b>7/70</b>	1 Coverage in years or 1,000 miles, whichever comes first.		
Fuel Feed	3/36	3/50	2 Fuel filter replacement and fuel tank flushing are covered when contamination results from a defect in material or workmanship.		
Fuel Rail Pressure Sensor	3/36	3/50	3 Covered up to the first required replacement only; see the maintenance schedule in the owner's manual.		
<b>Transmission Control System</b>					
Transmission Control Module (Includes Software Upgrades)	<b>8/80</b>	<b>8/80</b>			
Clutch Pressure Control Solenoid Valves	3/36	<b>7/70</b>			
Hydraulic Control Unit	3/36	<b>7/70</b>			
Input Shaft (Mainshaft) Speed Sensor	3/36	3/50			
Output Shaft (Countershaft) Speed Sensor	3/36	3/50			
Shift Control Solenoid Valves	3/36	<b>7/70</b>			
Transmission Fluid Pressure Switch	3/36	3/50			
Transmission Fluid Temperature Sensor	3/36	3/50			
Transmission Range Switch	3/36	3/50			