

Keyless Entry Remote Transmitter



Unlock button: Press once to unlock the driver's door. Press again to unlock the other doors. If you continue to hold the button on the second press, the windows and moonroof open; release the button to stop.

Tip: If you do not open a door within 30 seconds, the doors relock.

Lock button: Press to lock all doors. If you press again, a beep verifies that the doors are locked.

Tip: The doors will not lock if any door is not fully closed or the key is in the ignition switch. The beep will not sound if all the doors, the hood, and the trunk are not fully closed.

Trunk release button: Press and hold until the trunk opens.

Tip: The trunk will not open if the key is in the ignition.

Panic button: Press and hold for two seconds to turn on panic mode (sound horn and flash exterior lights). Press any button on the remote transmitter or turn the ignition to ON (II) to turn off panic mode. Otherwise, the panic mode turns off automatically after 30 seconds.

Tip: The panic mode will not work if the ignition is in ON (II).

Power Door Locks with Auto Window Open and Close Feature



- The master lock switch locks and unlocks all doors.
- Pull back on the driver's door lock tab to lock all doors. Push forward on the tab to unlock only the driver's door. The lock tabs on the other doors lock and unlock only that door.
- The doors can be locked and unlocked from the outside with the key.

Unlock: To unlock only the driver's door from outside the driver's door, turn the key to the right and release. To unlock other doors, turn the key again. If you continue to hold the key on the second turn, the windows and moonroof open; release to stop.

Lock: To lock all the doors from outside the driver's door, turn the key to the left and release. If you turn the key again and hold, the windows and moonroof close; release to stop.

Auto Door Lock

In addition to the normal lock functions, all the doors can be set to lock automatically in two modes (Park mode [A/T models] and Drive mode [A/T and M/T models]). The default setting from the factory is all doors lock in Drive mode. To change modes, follow the instructions below.

To activate either Auto Door Lock mode:

Park (P) mode: Locks all doors when the shift lever is moved out of Park (P).

- Make sure the shift lever is in (P), and the driver's door is closed.
- Turn the ignition switch to ON (II).
- Push and hold the master door **lock** switch on the driver's door. You will hear a clicking sound. Keep holding down the switch until you hear another clicking sound (about 5 seconds).
- Release the switch and then turn the ignition switch to LOCK (0) within 5 seconds.

Drive mode: Locks all doors when the vehicle's speed reaches about 9 mph.

- Turn the ignition switch to ON (II), and close the driver's door.
- Apply the parking brake.
- Push and hold the brake pedal.
- Move the shift lever out of (P).

- Push and hold the master door **lock** switch on the driver's door. You will hear a clicking sound. Keep holding down the switch until you hear another clicking sound (about 5 seconds).
- Release the switch and then, within 5 seconds, move the shift lever into Park (P) and turn the ignition switch to LOCK (0).

To turn off the Auto Door Lock modes:

- Set the parking brake.
- Open the driver's door.
- Turn the ignition switch to ON (II).
- Push and hold the master door **lock** switch on the driver's door until you hear a clicking sound (about 5 seconds).
- Release the switch and then turn the ignition switch to LOCK (0) within 5 seconds.



Auto Door Unlock

The driver's door or all doors can be set to unlock automatically in two modes (Park mode [A/T models] and Ignition switch unlock [A/T, M/T models]). The default setting from the factory is to unlock the driver's door in Ignition switch unlock mode. To change modes, follow the instructions below.

To activate either Auto Driver's Door Unlock mode:

Park (P) unlock mode: Unlocks the driver's door or all doors when the shift lever is moved into park (P).

- Apply the parking brake.
- Make sure the shift lever is in (P), and the driver's door is closed.
- Turn the ignition switch to ON (II).
- Push and hold the **rear** (unlock) of the master door lock switch on the driver's door (you will hear a click). Continue to hold down the switch:
 - Until you hear one click (after about 5 seconds) to activate the driver's door unlock feature.
 - Or, until you hear a second click (after 10 seconds) to activate the all doors unlock feature.
- Release the switch and then, within 5 seconds, turn the ignition switch to LOCK (0).



Ignition switch unlock mode: Unlocks the driver's door or all doors when the ignition switch is moved out of the ON (II) position.

- Apply the parking brake.
- Turn the ignition switch to ON (II), and close the driver's door.
- On A/T vehicles, push and hold the brake pedal, and move the shift lever out of (P).
- Push and hold the **rear** (unlock) of the master door lock switch on the driver's door (you will hear a click). Continue to hold down the switch:
 - Until you hear one click (after about 5 seconds) to activate the driver's door unlock feature.
 - Or, until you hear a second click (after 10 seconds) to activate the all doors unlock feature.
- Release the switch and then, within 5 seconds, turn the ignition switch to the ACCESSORY (I) position. On A/T vehicles, move the shift lever to the Park (P) position.
- Turn the ignition switch to the LOCK (0) position.

To turn off the Auto Door Unlock mode:

- Apply the parking brake.
- Turn the ignition switch to ON (II) and, **open** the driver's door.
- Push and hold the **rear** (unlock) of the master door lock switch on the driver's door until you hear a clicking sound (about 5 seconds).
- Release the switch, and then, within 5 seconds, turn the ignition switch to LOCK (0).

Note: If your vehicle's battery is removed or goes dead, the system keeps the auto door lock/unlock settings that you selected.

Childproof Door Locks



The childproof door locks are designed to prevent children seated in the rear from accidentally opening the rear doors. Each rear door has a lock lever near the edge.

- Move the lever down to the LOCK position, and the door cannot be opened from the inside, regardless of the position of the lock tab.
- To open the door, push the lock tab forward and use the outside door handle.

Vehicle Stability Assist (VSA®)

VSA detects impending oversteer or understeer, and automatically applies braking and/or reduces throttle to stabilize the vehicle.



VSA switch: To turn VSA on and off, press and hold until you hear a beep. The VSA activation indicator in the instrument panel comes on when the system is turned off.

Tip: VSA is turned on automatically each time you start the vehicle.

Power Windows



Tip: The power windows can be operated for 10 minutes after the ignition switch is turned off. This is canceled by opening any door.

- The driver's and front passenger (if equipped) windows have an Auto Down and Auto Up function. Push the switch firmly down to the second detent and release it to fully lower the window. Pull the switch firmly back and release it to fully raise the window. The first detent is used to open or close the window to the desired position.
- The main switch controls power to the passengers' windows. Push down on the switch and the passengers' windows cannot be opened or closed. The switch indicator will come on.

Moonroof (if equipped)

- **Open:** Pull back fully, then release (auto open), or until the desired position is reached.
- **Close:** Push forward full, then release (auto close) or until the desired position is reached.
- **Tilt:** Push up on the middle of the switch until the desired position is reached.



Tip: The moonroof operates for 10 minutes after the ignition switch is turned off. This is canceled by opening either front door.

Always check the owner's manual for more operating information and safety features.

**Locks/Windows/
VSA/Moonroof**