

AUTO DOOR LOCKS

Default Lock Setting



The doors are preset to lock when your vehicle reaches about 9 mph.

Default Unlock Setting



Only the driver's door is preset to unlock when you shift into Park (P).

Allows you to program how and when the vehicle doors automatically lock and unlock.

Modifying the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

1. **Close** the driver's door. **Shift** into Park.



2. **Turn** the ignition to the ON (II) position.



3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks



4. Within 20 seconds, **turn** the ignition to the LOCK (0) position.



Programmable Auto Door Lock/Unlock Settings

Below are the different programmable options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

AUTO DOOR UNLOCK		
Auto Unlock (all doors)		When you turn the ignition OFF
		When you shift into Park
Auto Unlock (only driver's door)		When you turn the ignition OFF
		When you shift into Park
Turn off Auto Unlock		
	Operate manually	

AUTO DOOR LOCK		
Auto Lock		When you reach 9 mph
		When you shift out of Park
Turn off Auto Lock		
	Operate manually	