

DRIVING POSITION MEMORY SYSTEM (DPMS) (if equipped)


Store up to two driver's seat and mirror positions into memory, which are activated by the corresponding remotes.

Programming DPMS

1. **Turn** the vehicle on. **Shift** into Park (P).



2. **Adjust** your preferred seat and outside mirror settings.

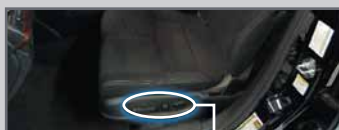

3. **Press and hold** the SET button until you hear a beep, then release.



4. **Press and hold** the memory button # corresponding to the remote (1 or 2) you are using until you hear two beeps.



Note: Each group of settings is activated by the corresponding remote transmitter (1 or 2) when it's used to unlock the driver's door. When activated, each item begins to adjust before you enter the vehicle.