

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

	Charging system		ABS (anti-lock brake system)
	Low brake fluid, Brake system		DRL (daytime running lights)
	Low oil pressure		Malfunction indicator lamp (check engine light)
	SRS (supplemental restraint system)		TPMS (tire pressure monitoring system)
			VSA® (vehicle stability assist)

Condition Indicators

Action is needed by driver

	Parking brake on: Release		Low fuel: Refill
	Door/Trunk open: Close door(s) / trunk		Low tire pressure: Add air
	Seat belt reminder: Fasten seat belt(s)		Maintenance Minder™: Make dealer appointment

On/Off Indicators

	PASSENGER AIRBAG OFF (above Hazard Warning button)		Fog lights on*
	SIDE AIRBAG OFF		Immobilizer Flashes: improperly coded key; use correct key
	VSA OFF		Headlights on
	CRUISE CONTROL on		Turn signals/hazards on
	CRUISE MAIN on		High beams on
	Fuel economy on*		

*if equipped