

FORWARD COLLISION WARNING (FCW)




Alerts you to the possibility of a front-end collision.

How It Works

If the camera mounted between the windshield and the rearview mirror detects a vehicle in front of you when your vehicle speed is 10 mph or higher—and it determines there is a likelihood of a frontal collision—the system provides you with visual and audible warnings.

If you do not brake in time or take preventive action:

- the heads-up light near the windshield flashes twice
- the FCW indicator flashes continuously
- a beep sounds continuously

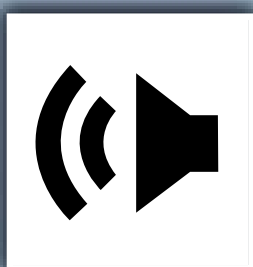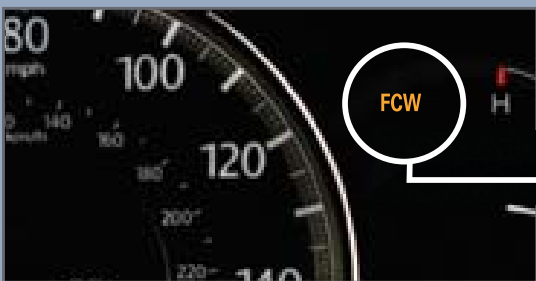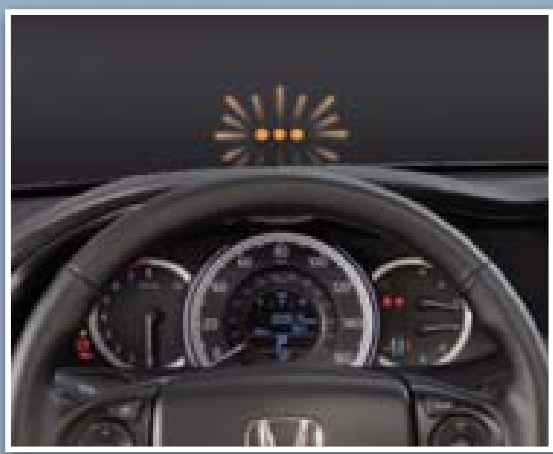

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Customizing FCW

Use the interface dial to make and enter selections.

1. **Press** SETTINGS.



2. **Select** Vehicle Settings.



3. **Move** the interface dial to the right to Driver Assist Style.




4. **Select** Forward Collision Warning Distance.



5. **Select** one of the options.

Long: early warning timing
Normal: standard warning timing
Short: late warning timing
Off: turn the system off

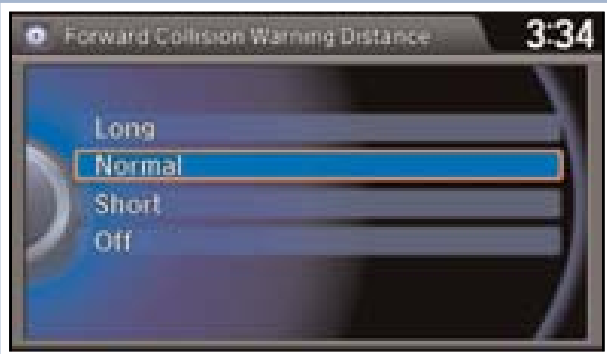

6. **Press** BACK to exit the menu.

