

BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.


To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

Using HFL

Pick-Up button: Answer an incoming call or view a partial Phone menu.

Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.

Talk button: Make a call using a stored voice tag or phone number.

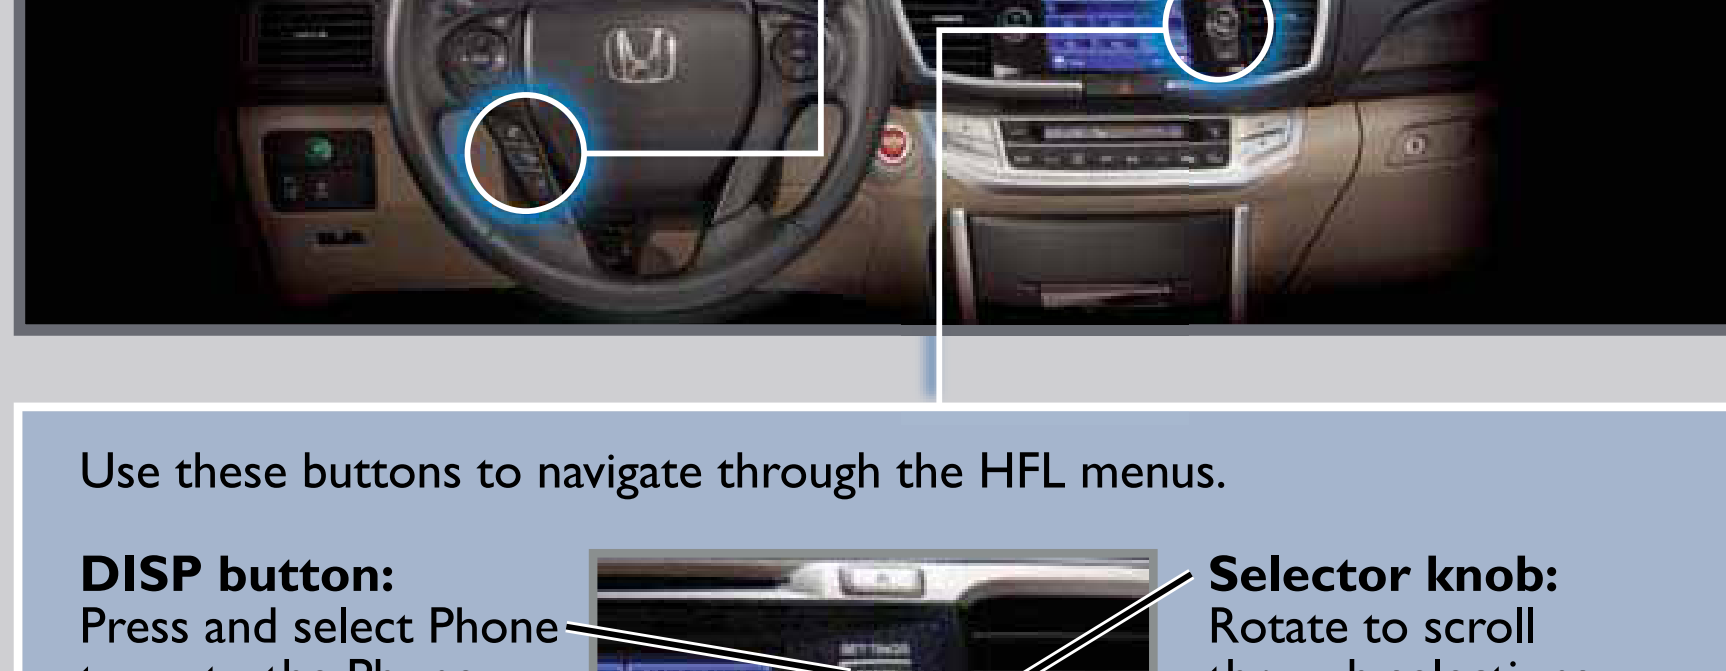

Use these buttons to navigate through the HFL menus.

DISP button: Press and select Phone to go to the Phone screen.

BACK button: Cancel an operation or return to the previous screen.



Selector knob: Rotate to scroll through selections and press to make a selection.

Pairing Your Phone

Pair your phone to begin using hands-free phone and related audio functions. The vehicle must be stopped to pair the phone.

Use the selector knob to make and enter selections.


1. Press DISP.




2. Select Settings.




3. Select Phone Settings.

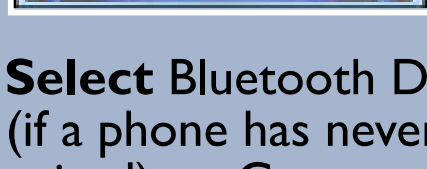

4. Select Bluetooth Device List (if a phone has never been paired), or Connect Phone (if pairing an additional phone).

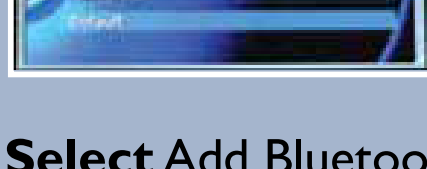


5. Select Add Bluetooth Device.

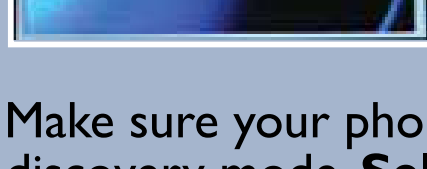

6. Make sure your phone is in discovery mode. Select OK.



7. HFL searches for your phone. Select your phone when it appears on the list.

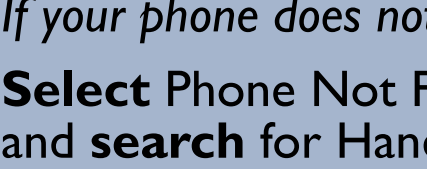


If your phone does not appear: Select Phone Not Found and search for HandsFreeLink from your phone. The system may give you a code to enter on your phone.

8. HFL gives you a six-digit code. Compare it to the code that appears on your phone. If it is the same, connect to HFL from your phone.



9. The system asks if you want to enable Phone Synchronization. Select On.

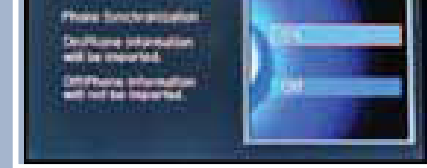

Dialing a Number

Enter a 10-digit phone number to call.

Using the Touchscreen*

1. Select PHONE.



 
2. Select Dial.



3. Enter the phone number. Select the green Dial icon.



4. The system begins to dial.




*This feature is inoperable when the vehicle is moving.


Using Voice Commands

Press and release the TALK button to say a command.

 1. Say "Dial by number."



2. Say the phone number.

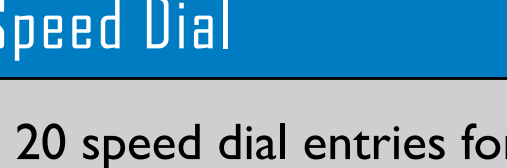

3. Say "Dial." The system begins to dial.




Using Speed Dial

Store 20 speed dial entries for quick calling.

Using the Touchscreen

1. Select PHONE.

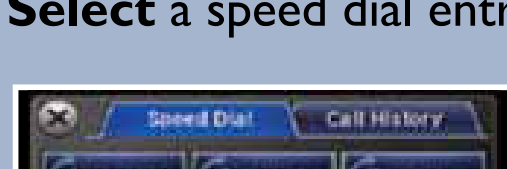

2. Select a speed dial entry.



3. The system begins to dial.





Using Voice Commands

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

Press and release the TALK button to say a command.

Say "Call" and the stored voice tag name. The system begins to dial.

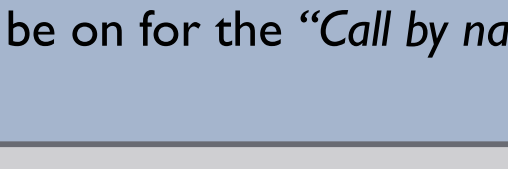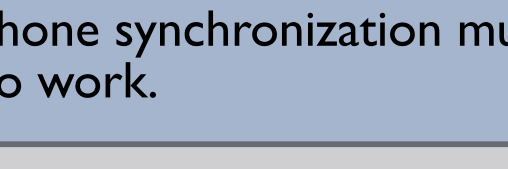

You can also say the name and type of any phone number stored in your phonebook. For example, say "Call by name" followed by "John Smith mobile."


Note: Phone synchronization must be on for the "Call by name" feature to work.

Using the Phonebook


When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the selector knob to make and enter selections.


1. Press DISP.

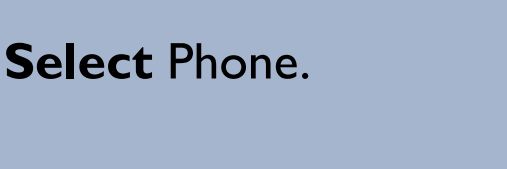


2. Select Phone.

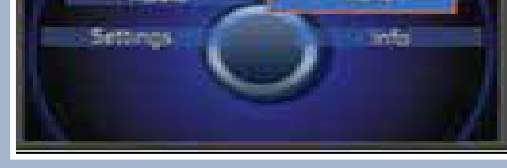

3. Select Phonebook.

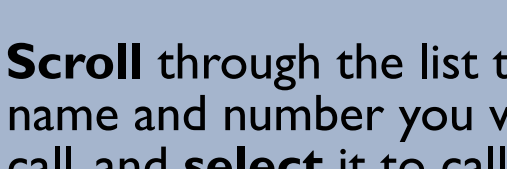


4. Scroll through the list to find the name and number you want to call, and select it to call.

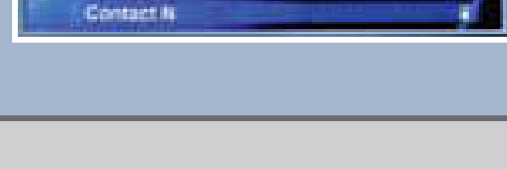

Receiving a Call


When you receive an incoming call, you hear a notification and see the following screen:

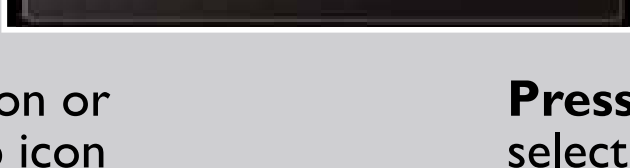

Press the Pick-Up button or select the green pick-up icon to accept the call.



Press the Hang-Up button or select the red hang-up icon to end or decline the call.

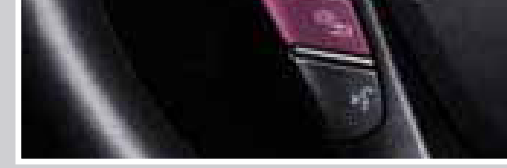

Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted