INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Starter system



Charging system



Low brake fluid



Low oil pressure



SRS (supplemental restraint system)



EPS (electric power steering)



FCW* (forward collision warning system)



LDW* (lane departure warning system)



ABS (anti-lock brake system)



Malfunction lamp (check engine light)



TPMS (blink and stays on) (tire pressure monitoring system)



VSA[®] (vehicle stability assist)



Smart Entry System



Automatic light control



Brake system

Condition Indicators Action is needed by driver



Parking brake on: Release



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



Low fuel: Refill



FCW* (blinks):



Brake



Immobilizer (blinks):
Use other vehicle key



Low tire pressure: Add air



Maintenance Minder™: Make dealer appointment



LDW* (blinks):

Stay in your lane

On/Off Indicators



PASSENGER AIRBAG **OFF** (next to display screen)



VSA OFF



CRUISE MAIN on





CRUISE CONTROL on



ECON Mode on



Fog lights on



Exterior lights on



Turn signals/hazards on



High beams on