

BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.



To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

Using HFL

Pick-Up button: Answer an incoming call.

Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.

Talk button: Make a call using a stored voice tag, phonebook name, or phone number.

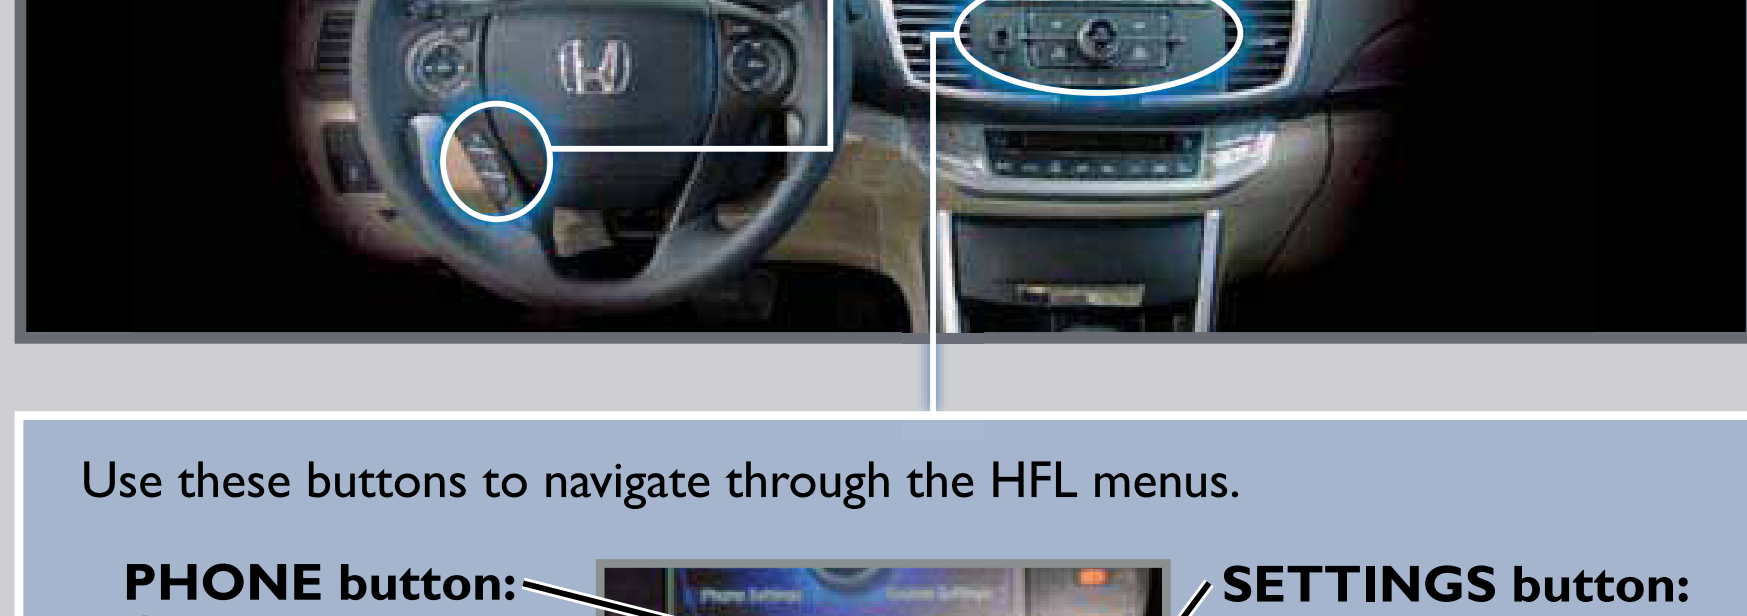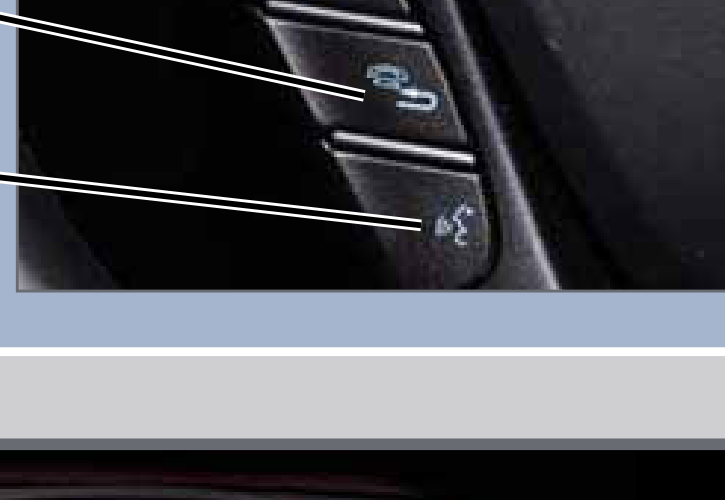


Use these buttons to navigate through the HFL menus.

PHONE button: Go directly to the Phone screen.

BACK button: Cancel an operation or return to the previous screen.

Selector knob: Rotate to scroll through selections and press to make a selection.

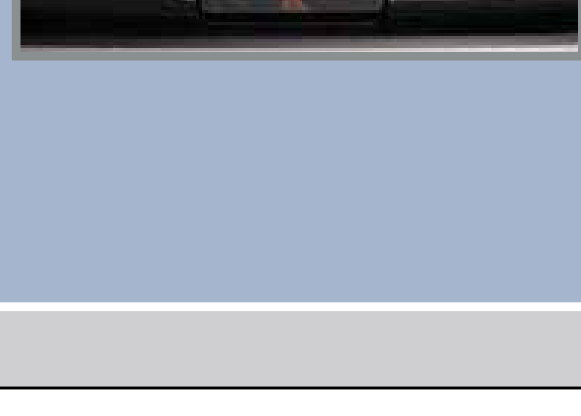

SETTINGS button: Go to Phone Settings to pair a phone and select other options.


MENU button: From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text Message options.

Pairing Your Phone


Pair your phone to begin using hands-free phone and related audio functions. The vehicle must be stopped to pair the phone.

Use the selector knob to make and enter selections.


1. Make sure your phone is in discovery mode.

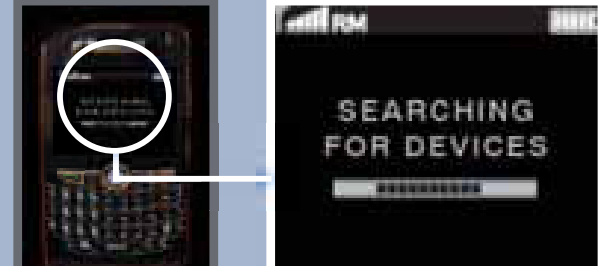

2. Press SETTINGS.

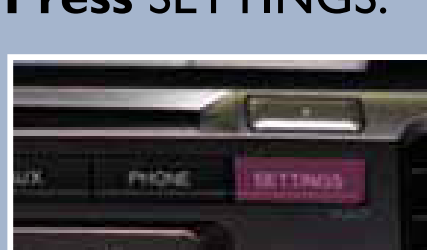


3. Select Phone Settings.

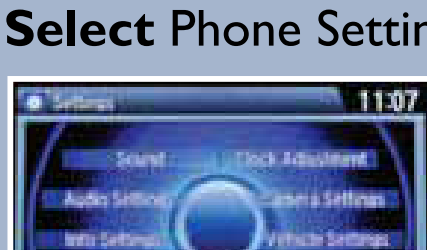

4. Select Connect Phone.



5. Select Add Bluetooth Device.

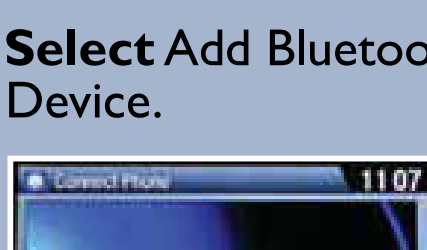


6. HFL searches for your phone. **Select** your phone when it appears on the list.




If your phone does not appear:

Select Phone Not Found and **search** for HandsFreeLink from your phone. The system may give you a code to enter on your phone. **Connect** to HFL.

7. HFL gives you a six-digit code. **Compare** it to the code that appears on your phone. If it is the same, **connect** to HFL from your phone.

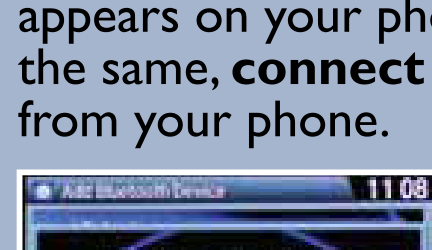

8. The system asks if you want to enable Phone Synchronization. **Select On.**

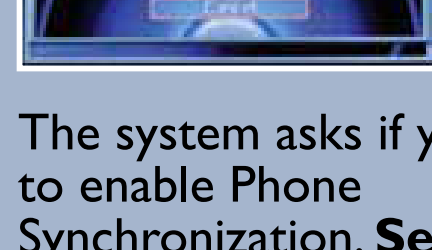


Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu*

Use the selector knob to make and enter selections.


1. Press PHONE.

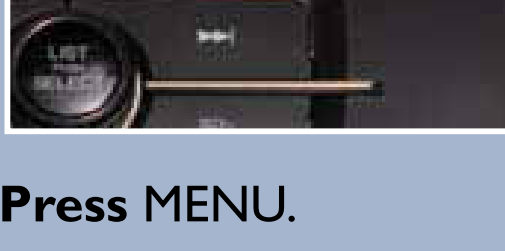

2. Press MENU.



3. Select Dial.

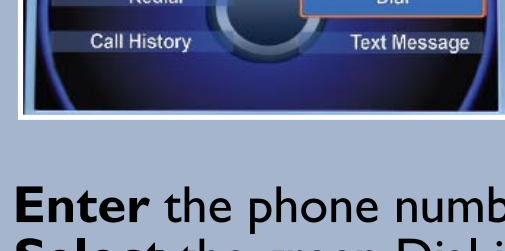

4. Enter the phone number. **Select** the green Dial icon to call.




*This feature is inoperable when the vehicle is moving.


Using Voice Commands

Press and release the TALK button to say a command.


1. Say "Dial by number."

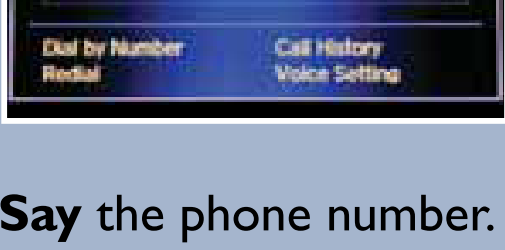

2. Say the phone number.

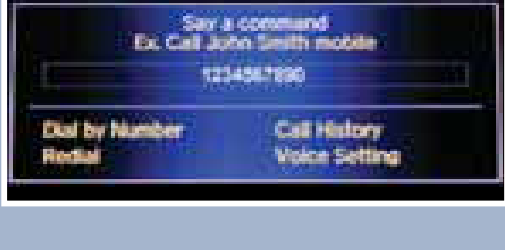

3. Say "Dial." The system begins to dial.

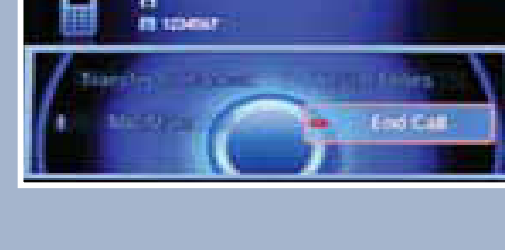


Using Speed Dial

Store 20 speed dial entries for quick calling.


Using the Menu

Use the selector knob to make and enter selections.


1. Press PHONE.

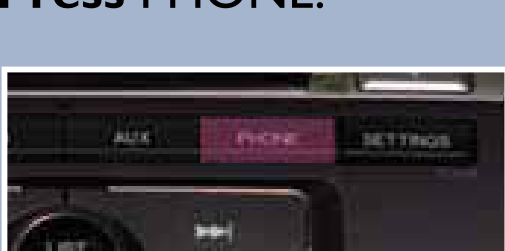


2. Press MENU.

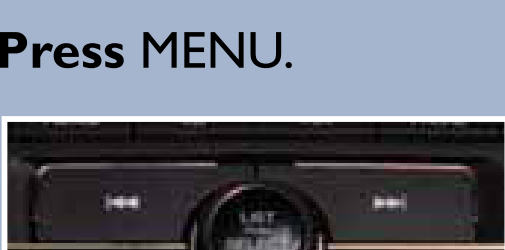

3. Select Speed Dial.

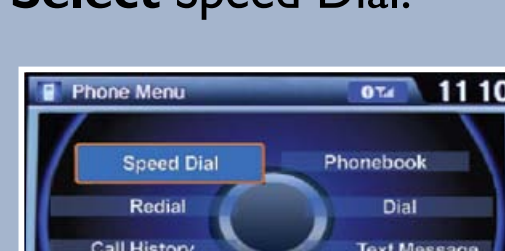

4. Select the entry to call.

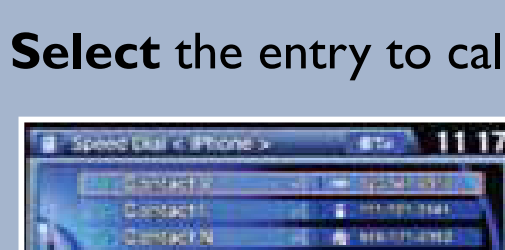


Using Voice Commands

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

Press and release the TALK button to say a command.

Say "Call" and the stored voice tag name. The system begins to dial.

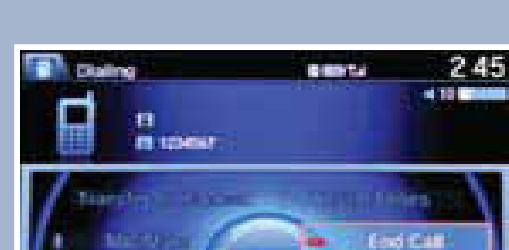

You can also say the name and type of any phone number stored in your phonebook. For example, say "Call by name" followed by "John Smith mobile."

Note: Phone synchronization must be on for the "Call by name" feature to work.

Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the selector knob to make and enter selections.

1. Press PHONE.



2. Press MENU.



3. Select Phonebook.




4. Scroll through the list to find the name and number you want to call, and **select** it to call.




Receiving a Call

When you receive an incoming call, you hear a notification and see the following pop-up message:

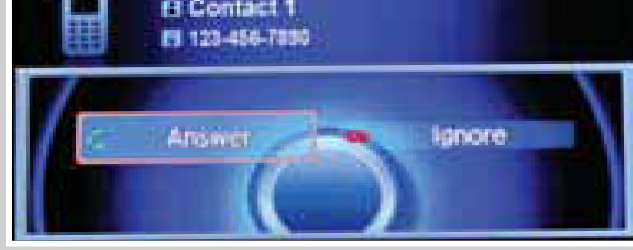

Press the Pick-Up button to accept the call.

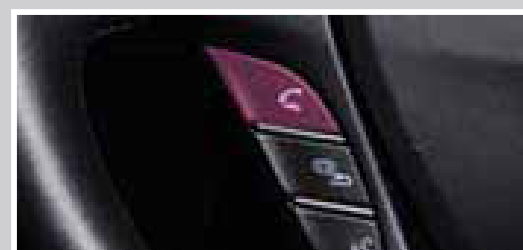

Press the Hang-Up button to end or decline the call.



Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

| Function | Restriction Level While Driving |
|--|--|
| HFL System (Without Navigation) | |
| 10-key dial | Restricted |
| Phonebook | Restricted |
| Speed dial | Not restricted |
| Speed dial setup | Restricted |
| Call history | Not restricted |
| Call history scroll | Not restricted |
| Redial | Not restricted |
| Connect to a new phone | Restricted |
| Connect to a previously paired phone | Not restricted |
| Manual dial tones | Restricted |
| Read text | Restricted |
| Reply to text | Not restricted |
| HFL System (With Navigation) | |
| 10-key dial | Voice command only |
| Phonebook | Voice command only. Limited to three screens |
| Speed dial | Not restricted |
| Speed dial setup | Restricted |
| Call history | Not restricted |
| Call history scroll | Voice command only. Limited to three screens |
| Redial | Not restricted |
| Connect to new phone | Restricted |