
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

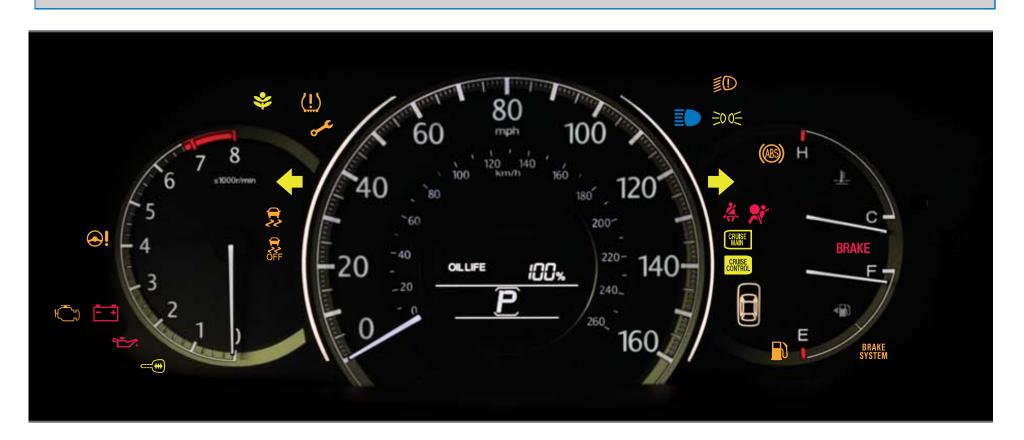

Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer



Charging system



Low brake fluid



Brake system



Low oil pressure



SRS (supplemental restraint system)



EPS (electric power steering)



ABS (anti-lock brake system)



Malfunction lamp (check engine light)



TPMS (blink and stays on) (tire pressure monitoring system)



VSA[®] (vehicle stability assist)



Automatic light control

Condition Indicators Action is needed by driver



Parking brake on: Release



Seat belt reminder: Fasten seat belt(s)



Door/Trunk open: Close door(s) / trunk



Low fuel: Refill



Immobilizer (blinks): Use other vehicle key



Low tire pressure: Add air



Maintenance Minder™: Make dealer appointment

On/Off Indicators



PASSENGER AIRBAG **OFF** (next to display screen)



VSA OFF





CRUISE CONTROL on



CRUISE MAIN on



ECON Mode on



Exterior lights on



Turn signals/hazards on



High beams on