


SMS TEXT MESSAGING

Receive and send text messages from your paired and linked phone using *Bluetooth®* HandsFreeLink®. Visit *handsfreelink.honda.com* to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.


Receiving Messages

Use the selector knob to make and enter selections.

1. A notification appears on the display. **Select** Read to open the message.

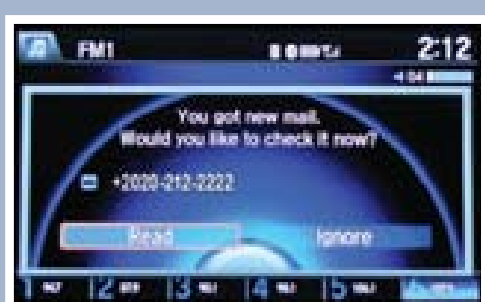


2. The message is displayed, and the system reads it aloud.

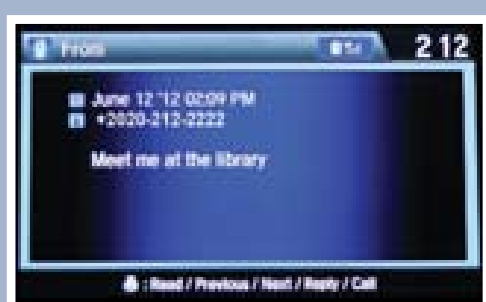

Replying to Messages

Use the selector knob to make and enter selections.


1. With the message open, **press** the selector knob.

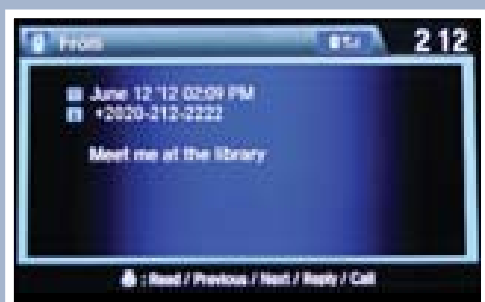


3. **Select** one of the six available reply messages.



2. **Select** Reply.

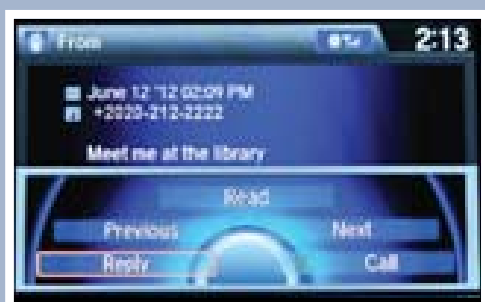

4. **Select** Send to send the message.

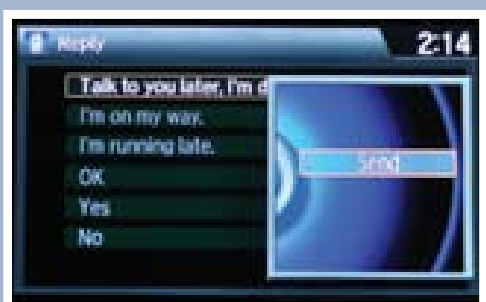


Calling the Sender

Use the selector knob to make and enter selections.


1. With the message open, **press** the selector knob.



3. HFL begins dialing the number.

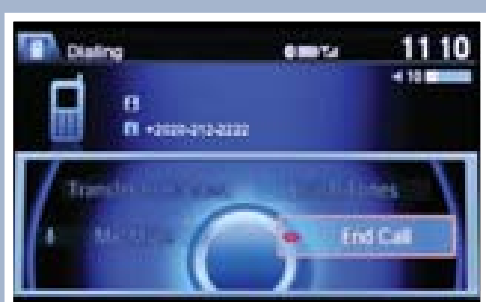

2. **Select** Call.

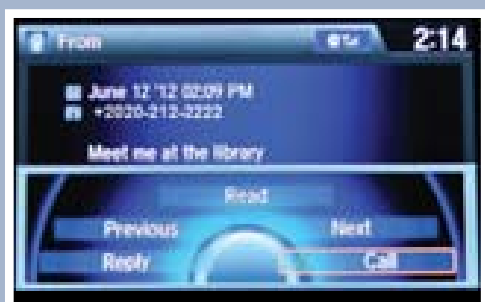

Displaying Messages

Use the selector knob to make and enter selections.

1. **Press** PHONE.



2. **Press** MENU.



3. **Select** Text Message. The 20 most recent messages are displayed.



4. **Select** a message to open it and hear it read aloud.

