

# TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

## What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.
3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.



## TPMS Calibration

Any time you inflate, rotate, or change one or more of your tires, you need to recalibrate the system.

1. **Press SETTINGS.**



2. **Select Vehicle Settings.**



3. **Select TPMS Calibration.**



4. **Select Calibrate.**



5. The low tire pressure indicator blinks and calibration begins.

