

FORWARD COLLISION WARNING (FCW)



Alerts you to the possibility of a front-end collision.

How It Works

If the camera mounted in the center of the upper windshield detects a vehicle in front of you when your vehicle speed is 10 mph or higher—and it determines there is a likelihood of a frontal collision—the system provides you with visual and audible warnings.

If you do not brake in time or take preventive action:

- the heads-up light near the windshield flashes twice
- the FCW indicator flashes continuously
- a beep sounds continuously

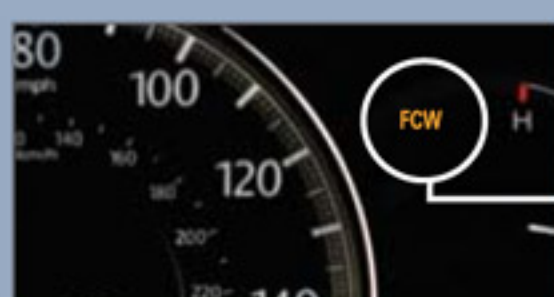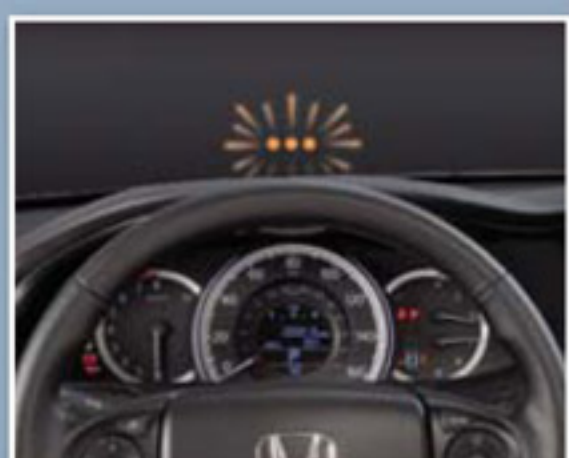

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Customizing FCW

Use the interface dial to make and enter selections.


1. Press SETTINGS.




2. Select Vehicle Settings.



3. Move the interface dial to the right to Driver Assist Style.

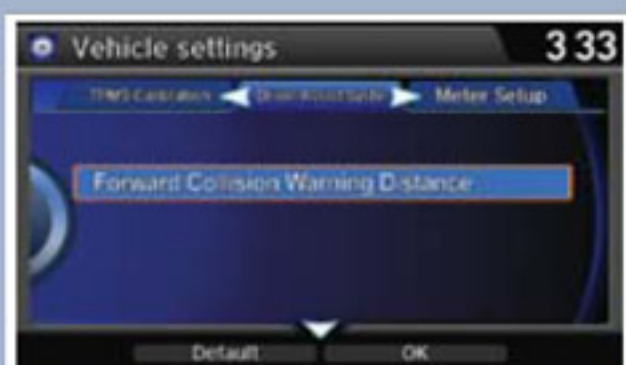


4. Select Forward Collision Warning Distance.

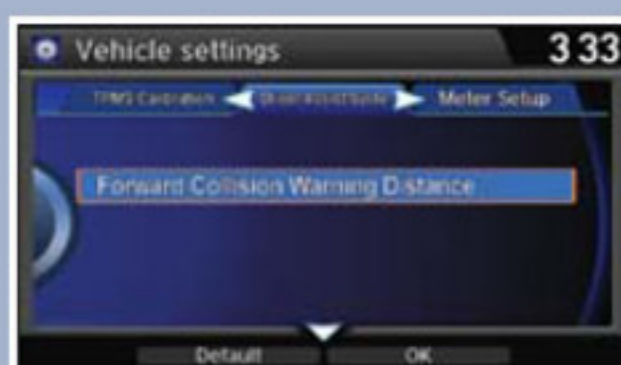

5. Select one of the options.

Long: early warning timing
Normal: standard warning timing
Short: late warning timing
Off: Turn the system off

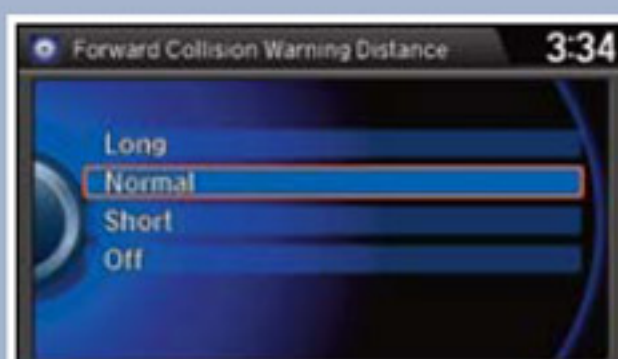

6. Press BACK to exit the menu.

