

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.



Default Unlock Setting

All doors are set to unlock when the driver's door is opened.



Changing the Door Lock Settings

Below is an example of how to change the auto door unlock setting*. Make sure the vehicle is in ON mode. See your Owner's Manual for other setting options.

Use the interface dial to make and enter selections.


1. Press SETTINGS.



2. Select Vehicle Settings.




3. Move the interface dial to the right to Door/Window Setup.

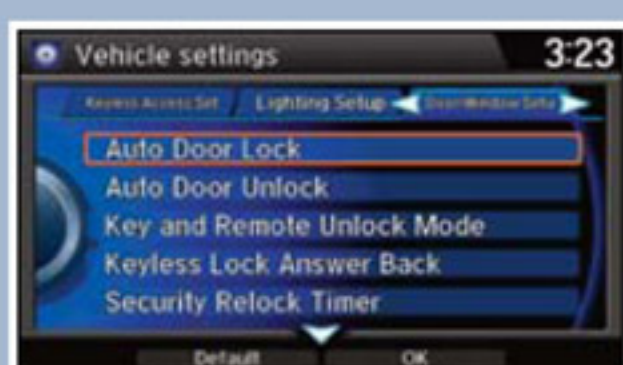

4. Select Auto Door Unlock.



5. Select from the options.

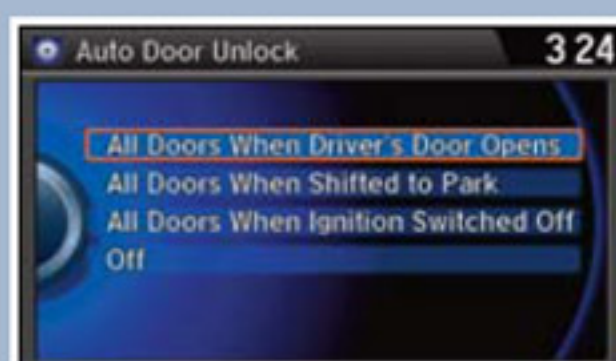

6. Press BACK to exit the menu.



Note: The driver's and front passenger's door can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for rear passengers.

*You can also change vehicle settings using the multi-information display.