

FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.



How It Works

If the radar sensor in the front grille detects a vehicle in front of you when your vehicle speed is 10 mph or higher--and it determines there is a likelihood of a frontal collision--the system provides you with the following visual and audible warnings:




With the FCW Distance set to Short:

- the heads-up light near the windshield flashes continuously
- the FCW indicator flashes continuously
- a beep sounds continuously until you take preventive action

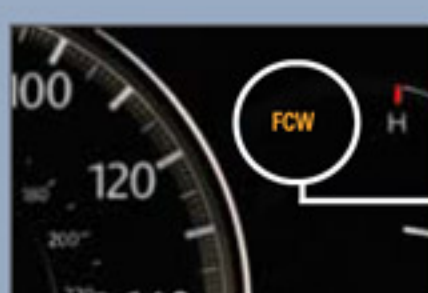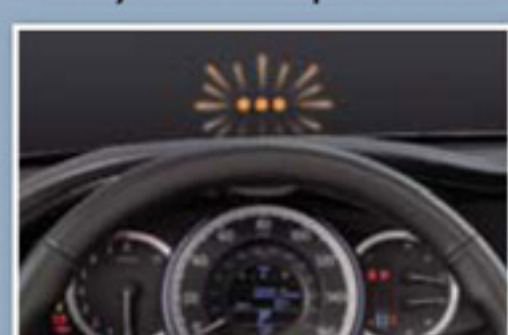

With the FCW Distance set to Normal or Long:

- the heads-up light near the windshield and FCW indicator flash twice
- if you do not take action to prevent a collision and the distance to the other vehicle becomes sufficiently close, BRAKE flashes on the MID, the FCW indicator and heads-up light flash, and a beep sounds continuously until you take preventive action

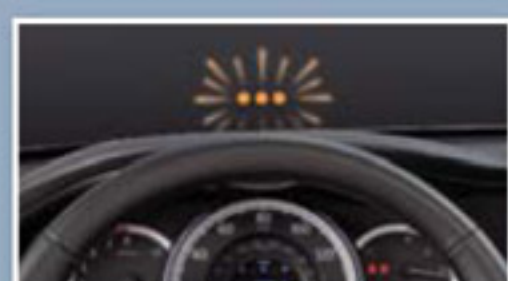

FCW

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Customizing FCW

Use the interface dial to make and enter selections.


1. Press SETTINGS.




2. Select Vehicle Settings.



3. Move the interface dial to the right to Driver Assist Style.

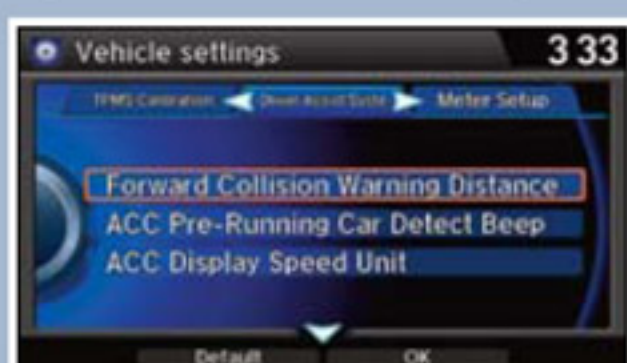


4. Select Forward Collision Warning Distance.

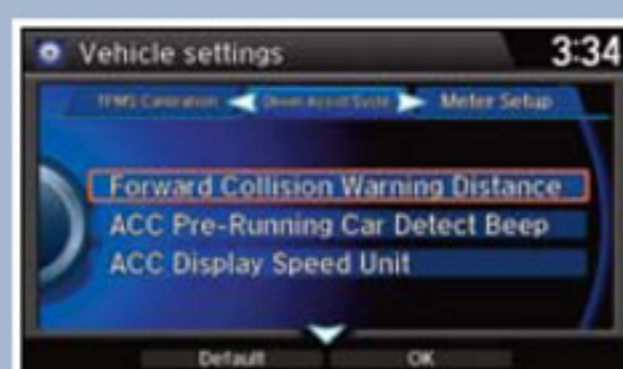

5. Select one of the options.

Long: early warning timing
Normal: standard warning timing
Short: late warning timing
Off: Turn the system off

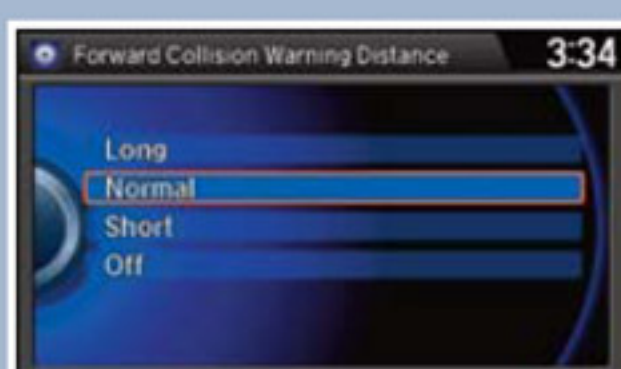

6. Press BACK to exit the menu.

