

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the Information Display




When you start the engine, the information display shows your last active selection from the previous drive cycle.



To toggle between the different displays:

- **Press** either info button (▲/▼) for the main displays.
- **Press** SEL/RESET for the lower displays.

Main Displays

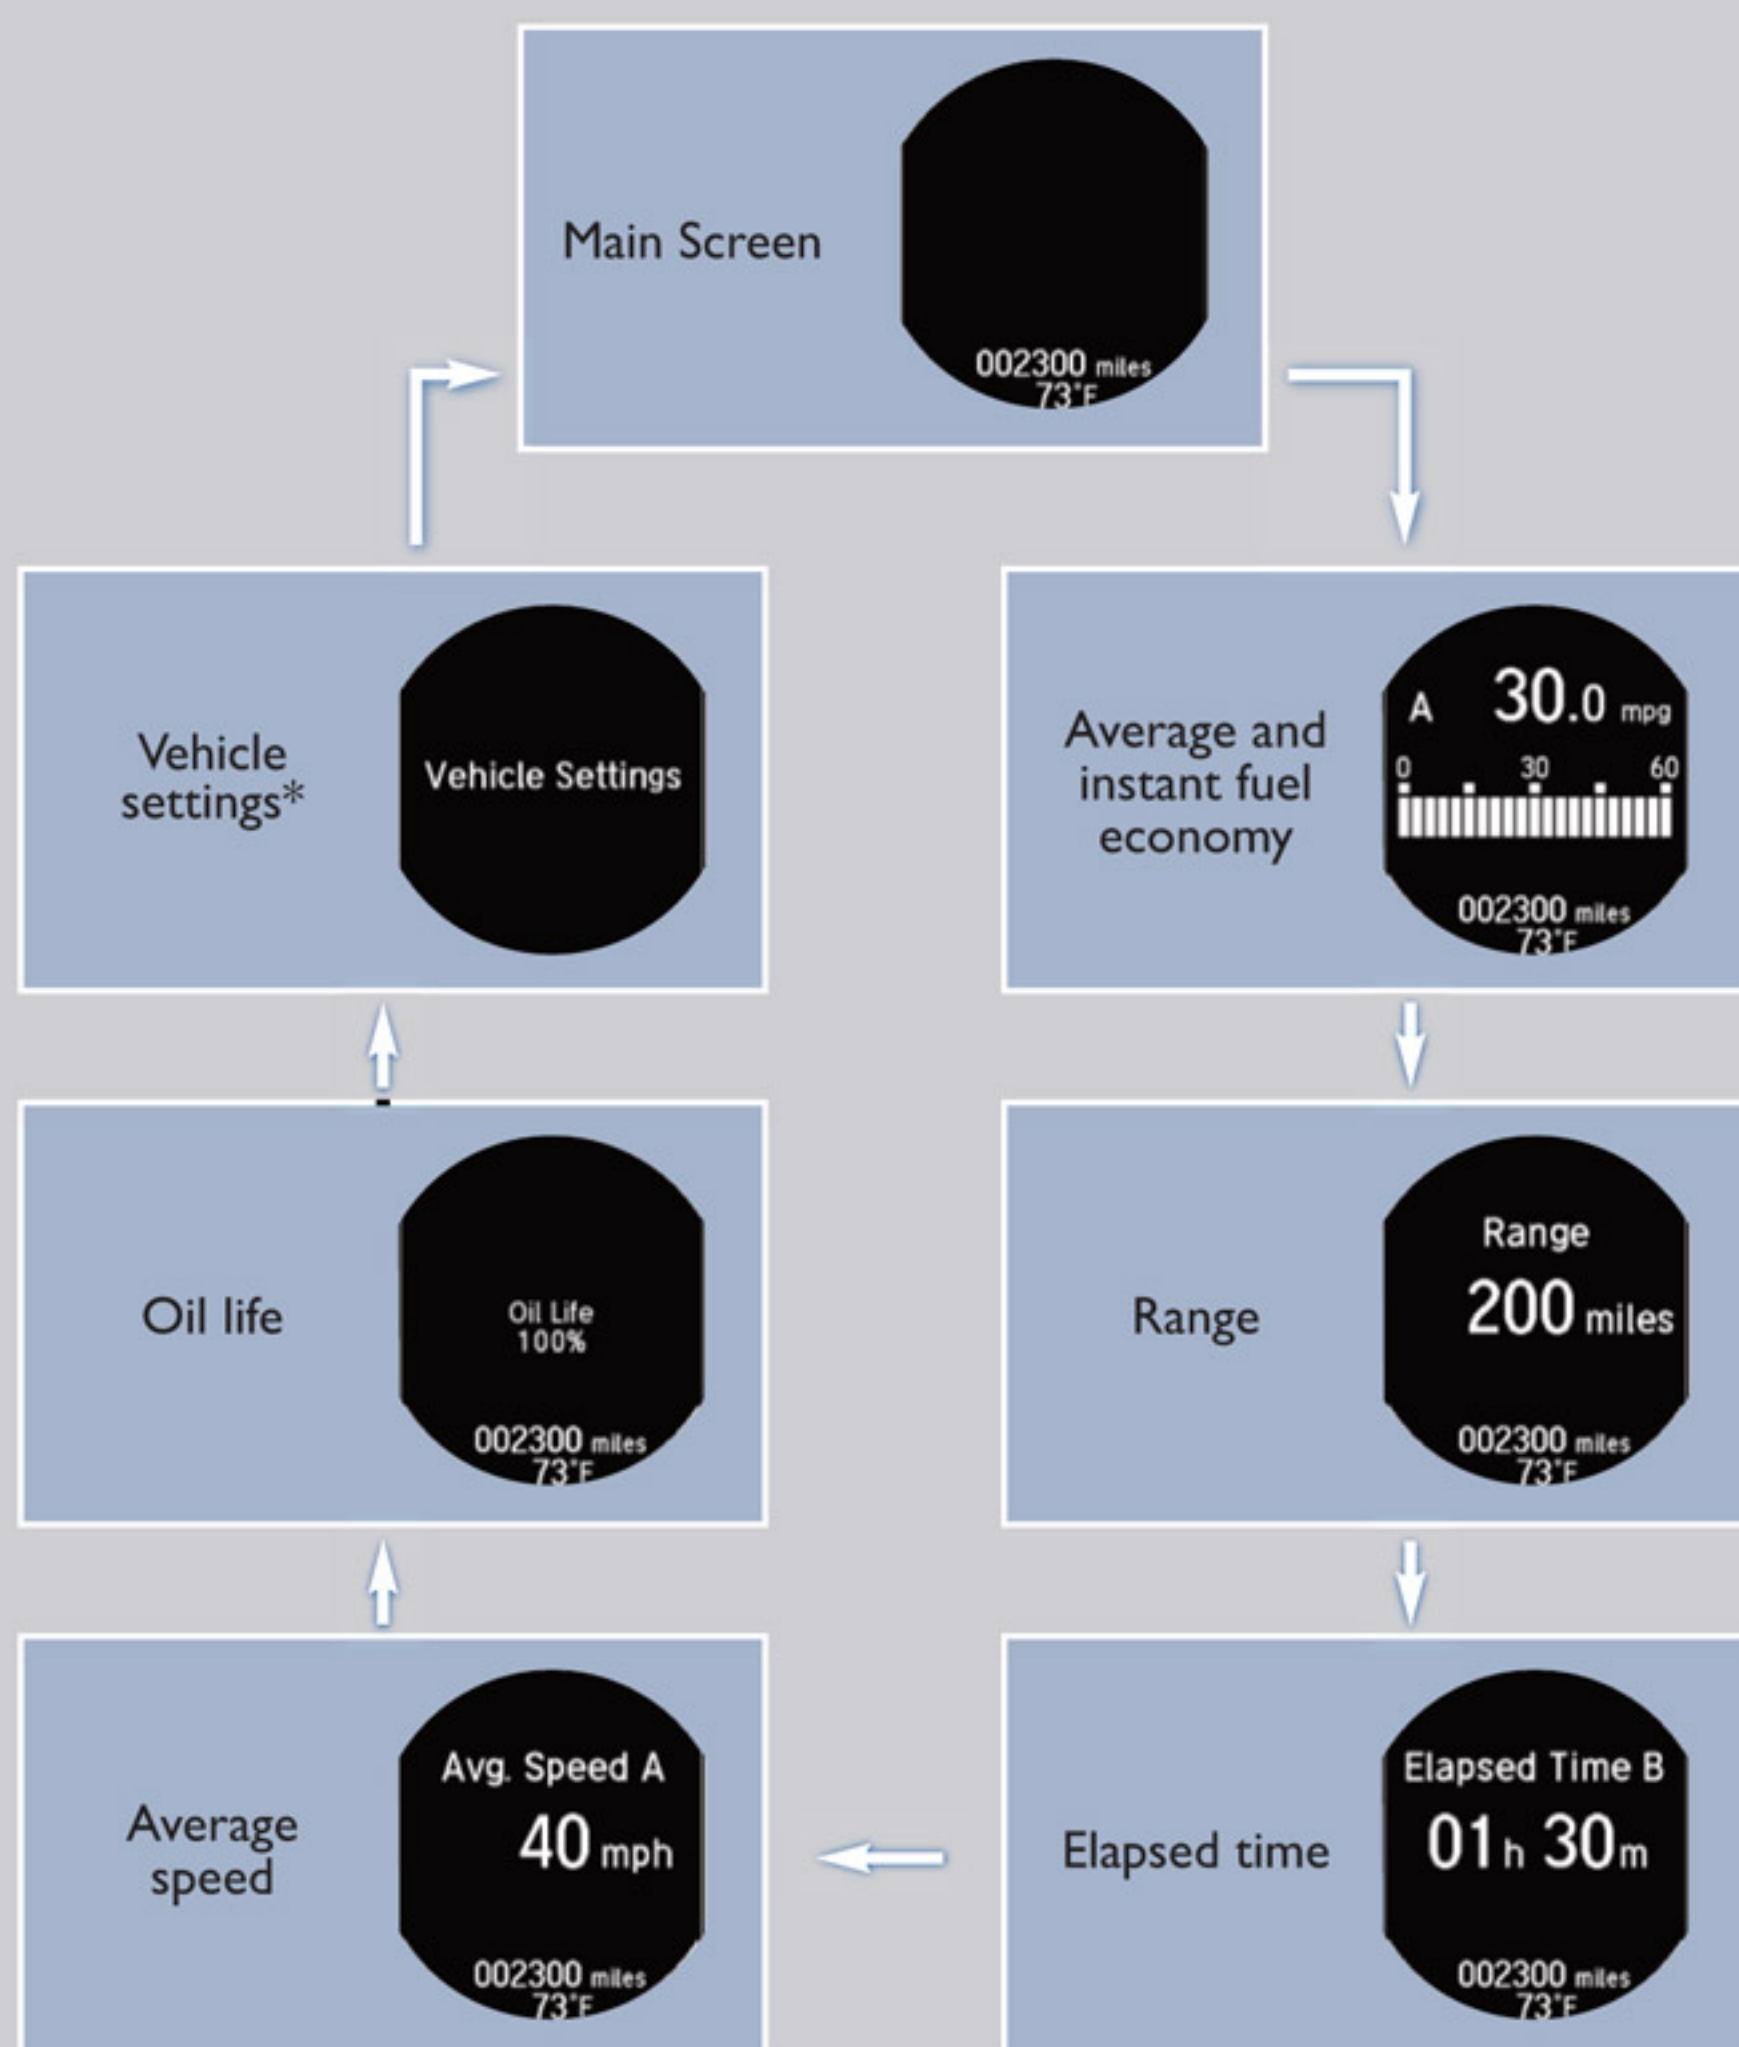

*You can also change vehicle settings using the **SETTINGS** button on the center panel.

Lower Displays

