



AUTO DOOR LOCKS

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

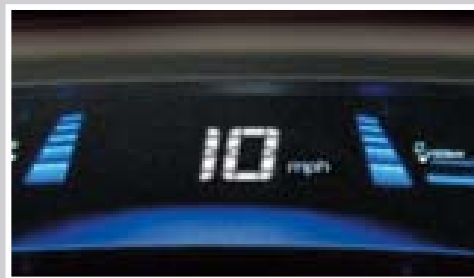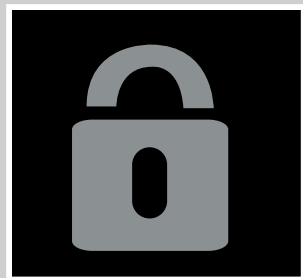

Default Unlock Setting

Only the driver's door is preset to unlock when you:

- **Shift** into Park (P) for automatic transmission vehicles.
- **Turn** the ignition switch to LOCK (0) for manual transmission vehicles.



Program how and when the vehicle doors automatically lock and unlock.

Programming the Auto Door Unlock Setting

Press the (+/-) buttons on the steering wheel to scroll through the menu options.
Press SOURCE to select an option.

1. Press MENU.



4. Select Auto Door Unlock.



2. Select Customize Settings.



5. Select All Doors with Shift to P.



3. Select Door Setup.



6. Press MENU to exit.



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

AUTO DOOR LOCK		
Auto Lock	 When you reach 10 mph	 When you shift out of Park*
Turn off Auto Lock	 Operate manually	

*IGN OFF for manual transmission vehicles

AUTO DOOR UNLOCK		
Auto Unlock (all doors)	 When you turn the ignition OFF	 When you shift out of Park*
Auto Unlock (only driver's door)	 When you turn the ignition OFF	 When you shift out of Park*
Turn off Auto Unlock	 Operate manually	