



SMS TEXT MESSAGING

Receive and send text messages from your paired and linked compatible phone. Visit handsfreelink.honda.com to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Text Messages

Use the selector knob to make and enter selections.



1. A notification appears on the multi-information display. **Select** Yes to open the message.
2. The message is displayed, and the system reads it aloud.

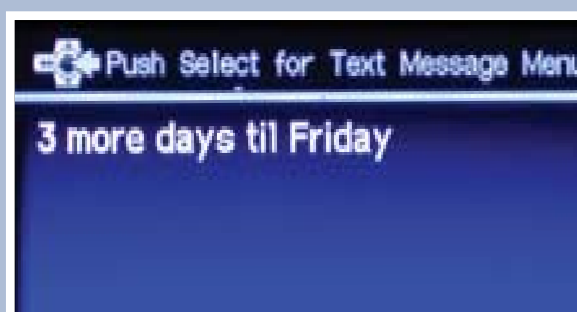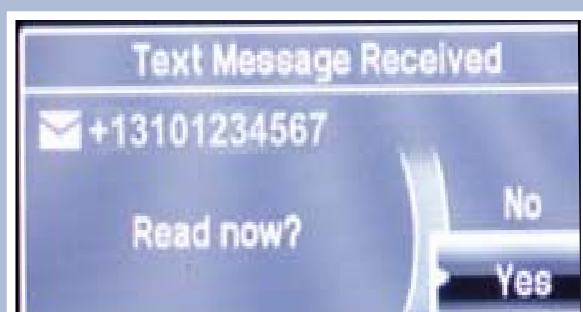


Receiving Text Messages

Use the selector knob to make and enter selections.

1. **Press** the Pick-Up button to go to the Phone screen.
3. **Select** a message to open it and hear it read aloud.

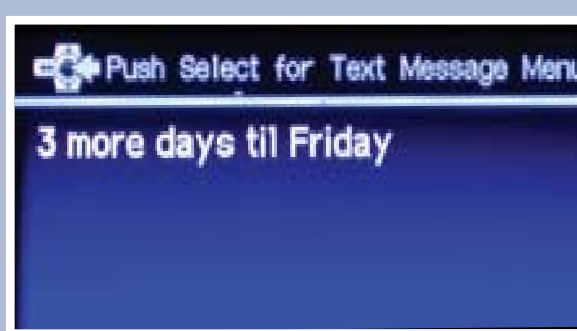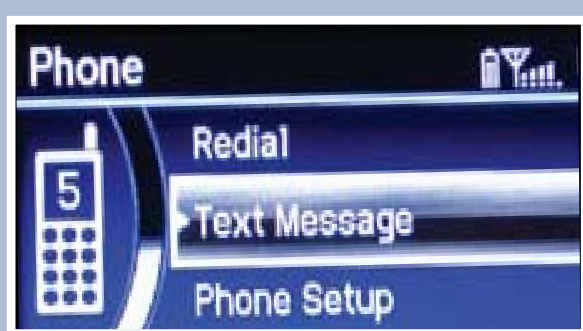



2. **Select** Text Message. The 20 most recent text messages from your phone are displayed.

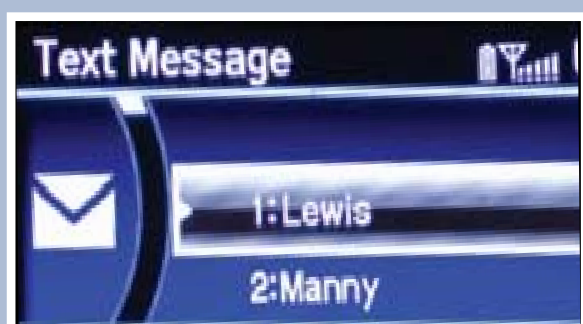

Replying to Text Messages



Use the selector knob to make and enter selections.

1. With the message open, **press** the selector knob to enter the Text Message menu.
3. **Select** one of the six available reply messages.

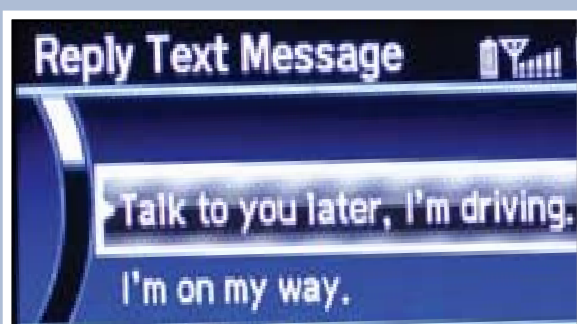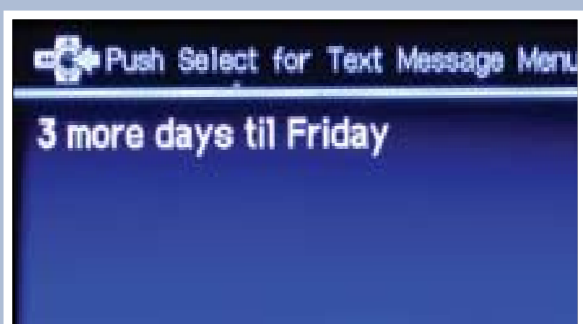

2. **Select** Reply.



4. **Select** Yes to send the message.

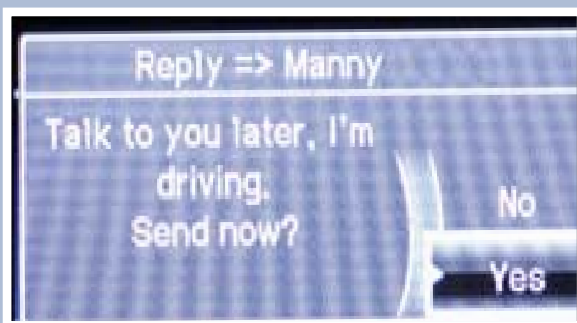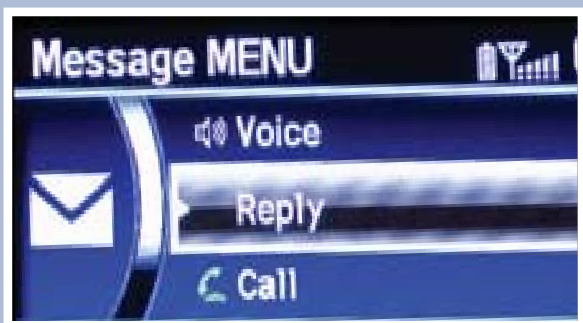

Calling the Sender

Use the selector knob to make and enter selections.

1. With the message open, **press** the selector knob to enter the Text Message menu.
3. HFL begins dialing the number.

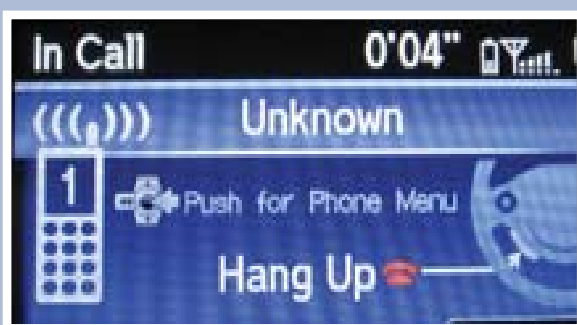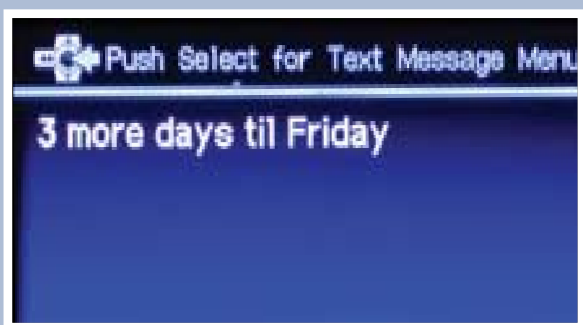

2. **Select** Call.

