


AUTO DOOR LOCKS

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

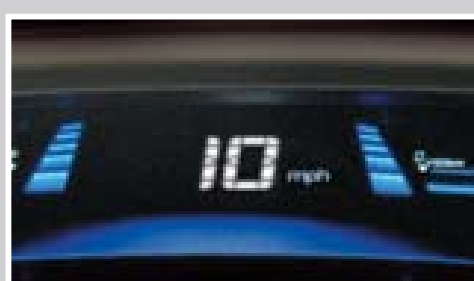

Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).



Program how and when the vehicle doors automatically lock and unlock.


Programming the Auto Door Unlock Setting

Press the (+/-) buttons on the steering wheel to scroll through the menu options.
Press SOURCE to select an option.

1. Press MENU.



2. Select Customize Settings.

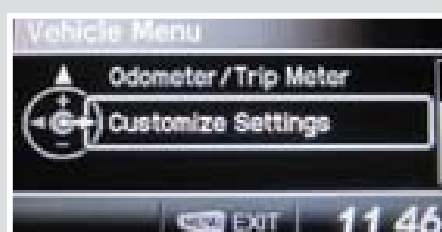

3. Select Door Setup.



4. Select Auto Door Unlock.



5. Select All Doors with Shift to P.



6. Press MENU to exit.




Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

AUTO DOOR LOCK

Auto Lock

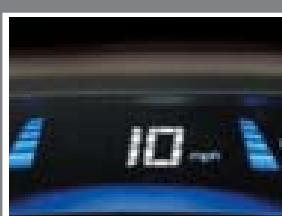

When you reach 10 mph




When you shift out of Park

Turn off Auto Lock




Operate manually

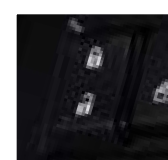

AUTO DOOR UNLOCK

Auto Unlock (all doors)

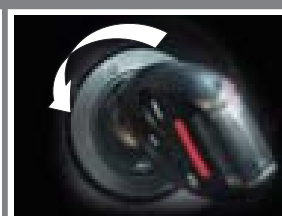

When you turn the ignition OFF



When you shift out of Park

Auto Unlock (only driver's door)



When you turn the ignition OFF



When you shift out of Park

Turn off Auto Unlock



Operate manually

