

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner’s Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



Low brake fluid, Brake system



Low oil pressure



SRS (supplemental restraint system)



Transmission (blinking)



Brake system



IMA system



ABS (anti-lock brake system)



EPS (electric power steering)



Malfunction indicator lamp (check engine light)



VSA® (vehicle stability assist)



TPMS (blinks and stays on) (tire pressure monitoring system)



FCW (forward collision warning system)



LDW (lane departure warning system)



Low engine temperature

Condition Indicators


Action is needed by driver



Parking brake on:
Release



Seat belt reminder:
Fasten seat belt(s)

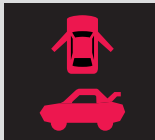

Door/Trunk open:
Close door(s) / trunk



Low fuel:
Refill



Low tire pressure:
Add air



High temperature:
Drive slowly or pull over



Message indicator:
See i-MID



Immobilizer (blinks):
Use other vehicle key

On/Off Indicators



PASSENGER AIRBAG **OFF**
(next to i-MID)



VSA **OFF**



FCW **off**



CRUISE MAIN **on**



CRUISE CONTROL **on**



 
Auto idle stop **on**



ECON mode **on**



Exterior lights **on**



Turn signals/hazards **on**



High beams **on**