

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Locks



Default Lock Setting
The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting
All doors are set to unlock when the driver's door is opened.

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in ON mode. See your Owner's Manual for complete setting options.

1. Press and hold DISP to go to the Settings screen. Use the selector knob to make and enter selections.
2. Select Vehicle Settings.
3. Select Door/Window Setup.
4. Select Auto Door Lock or Auto Door Unlock.
5. Select from the options.
6. Press BACK to exit the menu.



You can also change vehicle settings using the multi-information display.

Note: The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for unlocking the rear doors when a front door handle is pulled.