SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

Adjusting Vehicle Settings





Press and hold DISP to go to the settings menu. Use the selector knob to make and enter selections.

Choose from the available options:



Audio Settings

Change sound options and various settings for audio modes.

Vehicle Settings*

TPMS calibration, meter setup, door setup, and more.

System Settings

Adjust the display, system language, and more.

Info Settings

Import wallpaper and select clock type.

Phone Settings

Pair a phone, change call and text/e-mail options, and more.

Camera Settings

Change camera modes.

DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote transmitter (I or 2).


Programming the DPMS

I. Turn on the vehicle. Make sure the shift lever is in Park (P).





2. Adjust the seat to your preferred position.

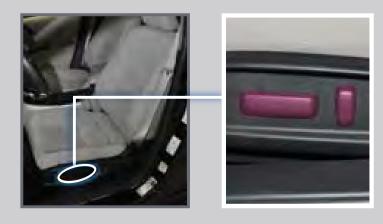

3. Press SET. You will hear a beep.



4. Press the memory button corresponding to the remote(I or 2) you are using within 5 seconds. You will hear two beeps.




Note: Once set, stored positions can be recalled by pressing one of the memory buttons (I or 2) on the door.

^{*}The shift lever must be in Park (P) to access this menu.


SYSTEM SETTINGS

You can customize the overall display and sounds on the audio/information screen.

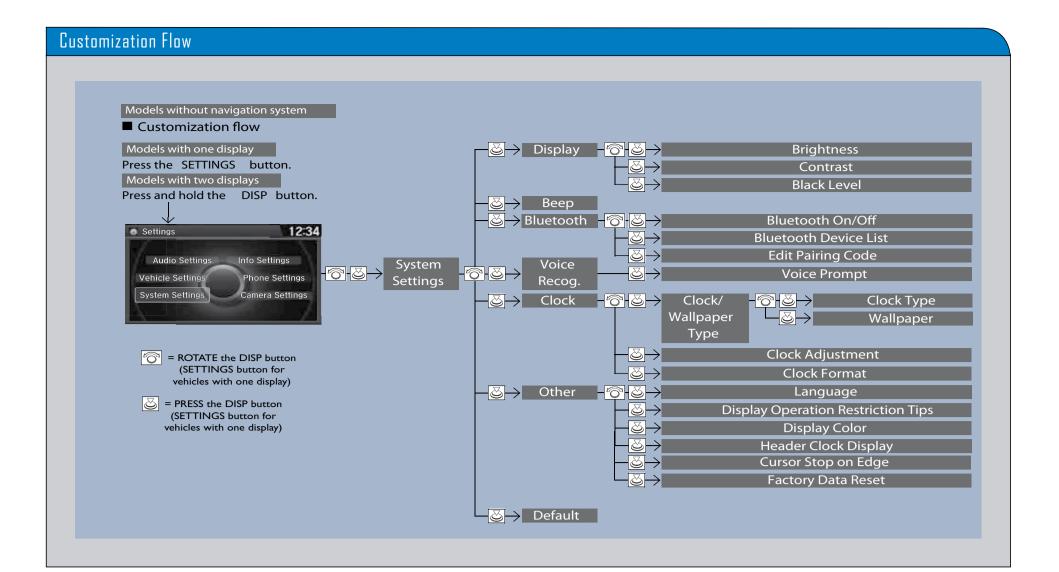


VEHICLE SETTINGS

You can customize your vehicle's settings using the audio/information screen.

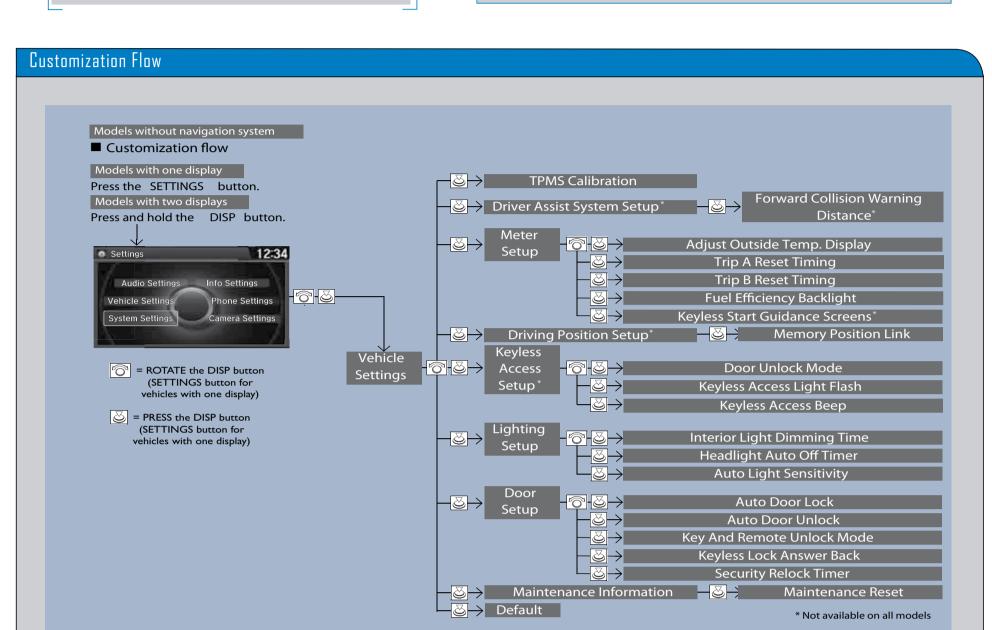


AUDIO/INFO SETTINGS

You can customize the audio settings on the audio/information screen.

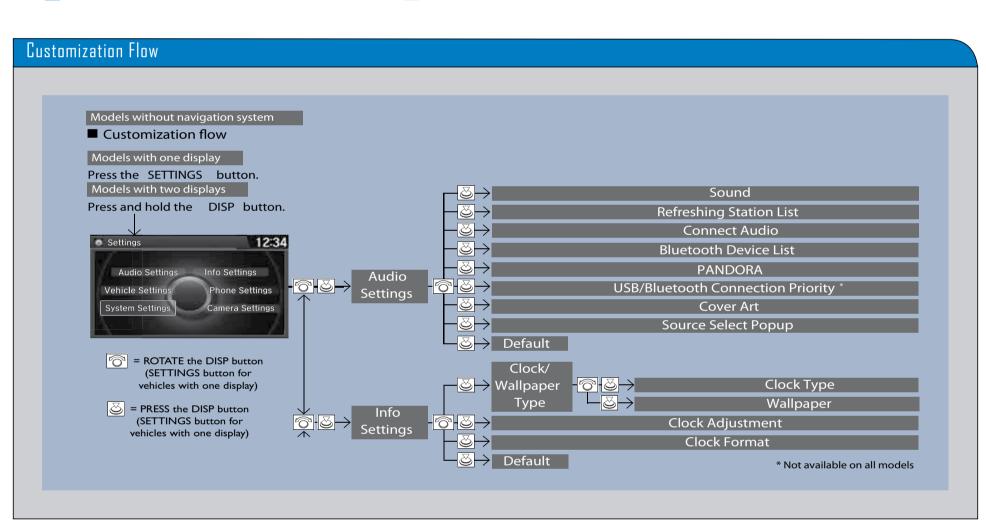

PHONE SETTINGS

You can customize the phone settings on the audio/information screen.

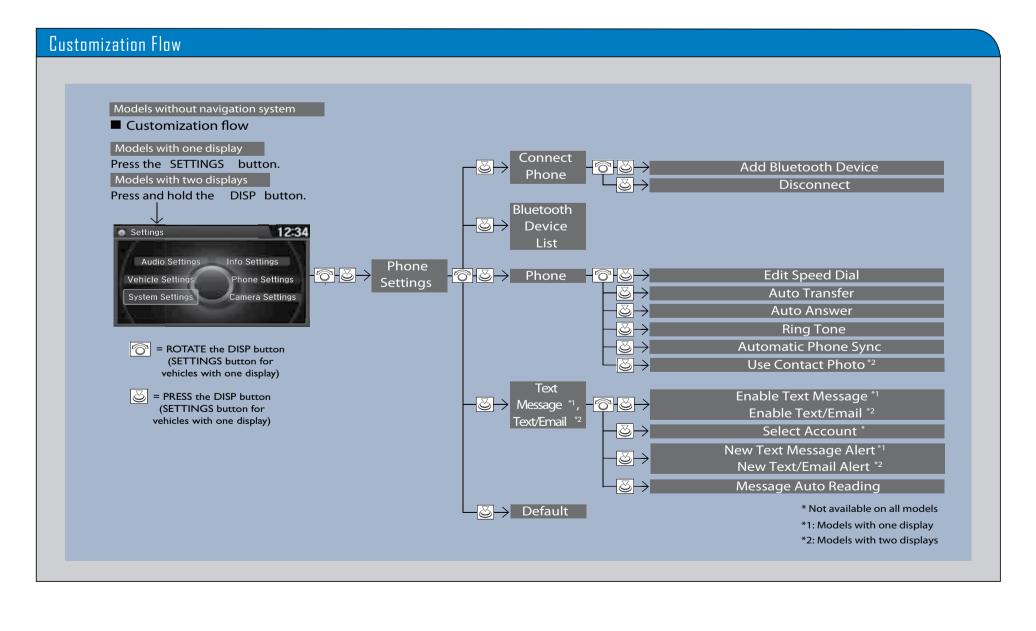

CAMERA SETTINGS

vehicles with one display)

audio/information screen.

You can customize the camera settings on the

