








 
 
 
 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators


If an indicator remains on, there may be a problem; see your dealer

	Charging system		ABS (anti-lock brake system)
	Brake system, low brake fluid		Malfunction lamp (check engine light)
	Low oil pressure		TPMS (<i>blinks and stays on</i>) (tire pressure monitoring system)
	SRS (supplemental restraint system)		VSA [®] (vehicle stability assist)
	EPS (electric power steering)		Smart Entry System
	FCW (forward collision warning system)		Brake system
	LDW (lane departure warning system)		Power system


Condition Indicators

Action is needed by driver

	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
	READY: Ready to drive		Immobilizer (blinks): Use other vehicle key

	Low fuel: Refill		Low tire pressure (<i>stays on</i>): Add air
	System message indicator: Check MID		

On/Off Indicators

	PASSENGER AIRBAG OFF (next to display screen)		Exterior lights on
	VSA OFF		Turn signals/hazards on
	FCW OFF		High beams on
	Fog lights on		Electric motor (EV mode) on
	ECON Mode on		Hybrid or charge (HV mode) on