

 













INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators




If an indicator remains on, there may be a problem; see your dealer

	Charging system		Anti-Lock Brake System (ABS)
	Low brake fluid		Malfunction lamp (check engine light)
	Low oil pressure		Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>)
	Supplemental Restraint System (SRS)		Vehicle Stability Assist® (VSA)
	Electric Power Steering (EPS)		Smart Entry System
	Forward Collision Warning (FCW)		Brake system
	Lane Departure Warning (LDW)		Adaptive Cruise Control (ACC)









Condition Indicators

Action is needed by driver

	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
	Door/Trunk open: Close door(s) / trunk		Immobilizer (<i>blinks</i>): Use other vehicle key and see dealer

	Low fuel: Refill		Low tire pressure: Add air
	System message indicator: Check MID		

On/Off Indicators

	PASSENGER AIRBAG OFF (next to display screen)		Exterior lights on
	VSA OFF		Turn signals/hazards on
	ECON Mode on		High beams on
	Fog lights on		Adaptive Cruise Control on