


INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper screen.

Changing the Display



Press the Display button to change the main displays.

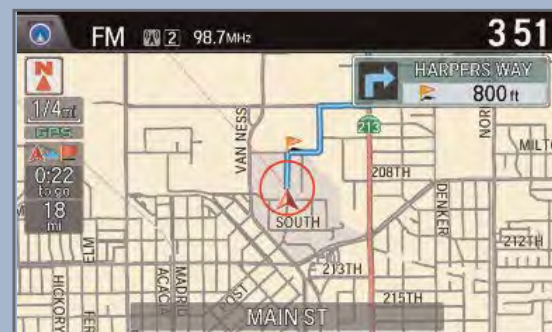

Display Options


Audio
Shows current audio information.



Phone
Shows phone screen.



Navigation
Shows map or navigation information.

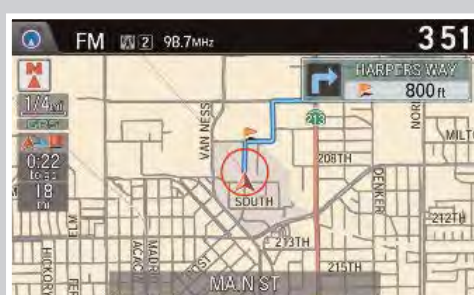

Info
Shows information screen and options.

