
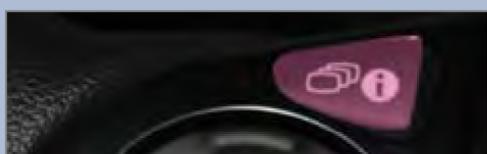



# INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Consists of several displays that provide you with useful information.


## Accessing the i-MID

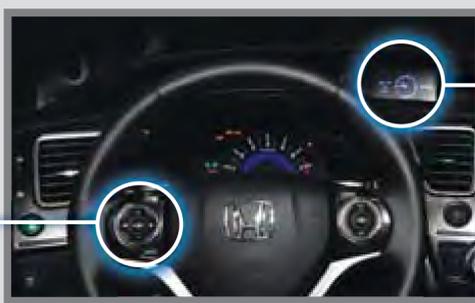


Press the Display/Info button to change main displays.

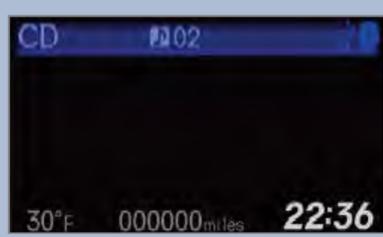

## Main Displays

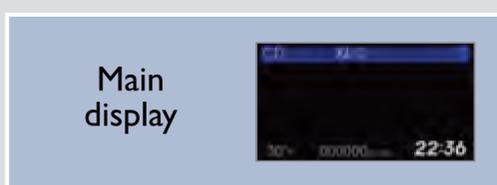


Main display

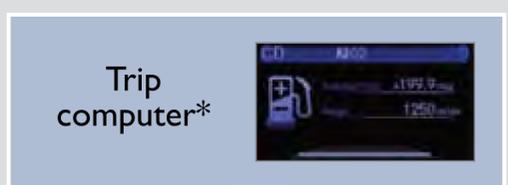

Trip computer\*



Clock (or wallpaper)

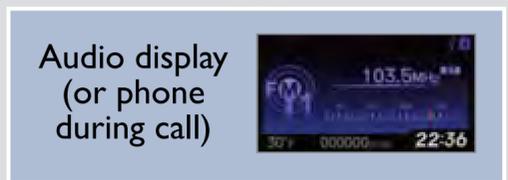

Audio display (or phone during call)

A warning or indicator message may appear as necessary. Press the INFO button to clear it.



\*Press and hold the Display/Info button to enter the trip computer menu. Press Display/Info to scroll through range, elapsed time, and average speed.

## Sub-displays



Press the SEL/RESET knob to change sub-displays.



Outside temperature

Odometer  
Trip A  
Trip B

Clock

## Steering Wheel Controls


Use these buttons to operate the i-MID and the Vehicle Menu.



**(+) Button:**  
Press to scroll upward in the Vehicle Menu.

**(◀) Button:**  
Press to go back to the previous Vehicle Menu screen.

**(-) Button:**  
Press to scroll downward in the Vehicle Menu.

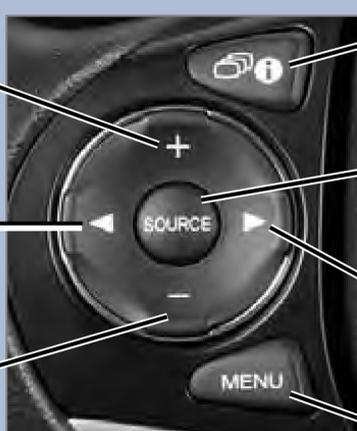

**Display/Information Button:**  
Change i-MID displays.

**SOURCE Button:**  
Press to enter a selection.

**(▶) Button:**  
Press to go to the next Vehicle Menu screen.

**MENU Button:**  
Press to go to Vehicle Menu for customization and other settings.