


Auto Idle Stop

Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop occurrence and duration vary depending on certain conditions, such as climate control operation, IMA battery level, and outside temperature. See your Owner's Manual for more information.

How It Works

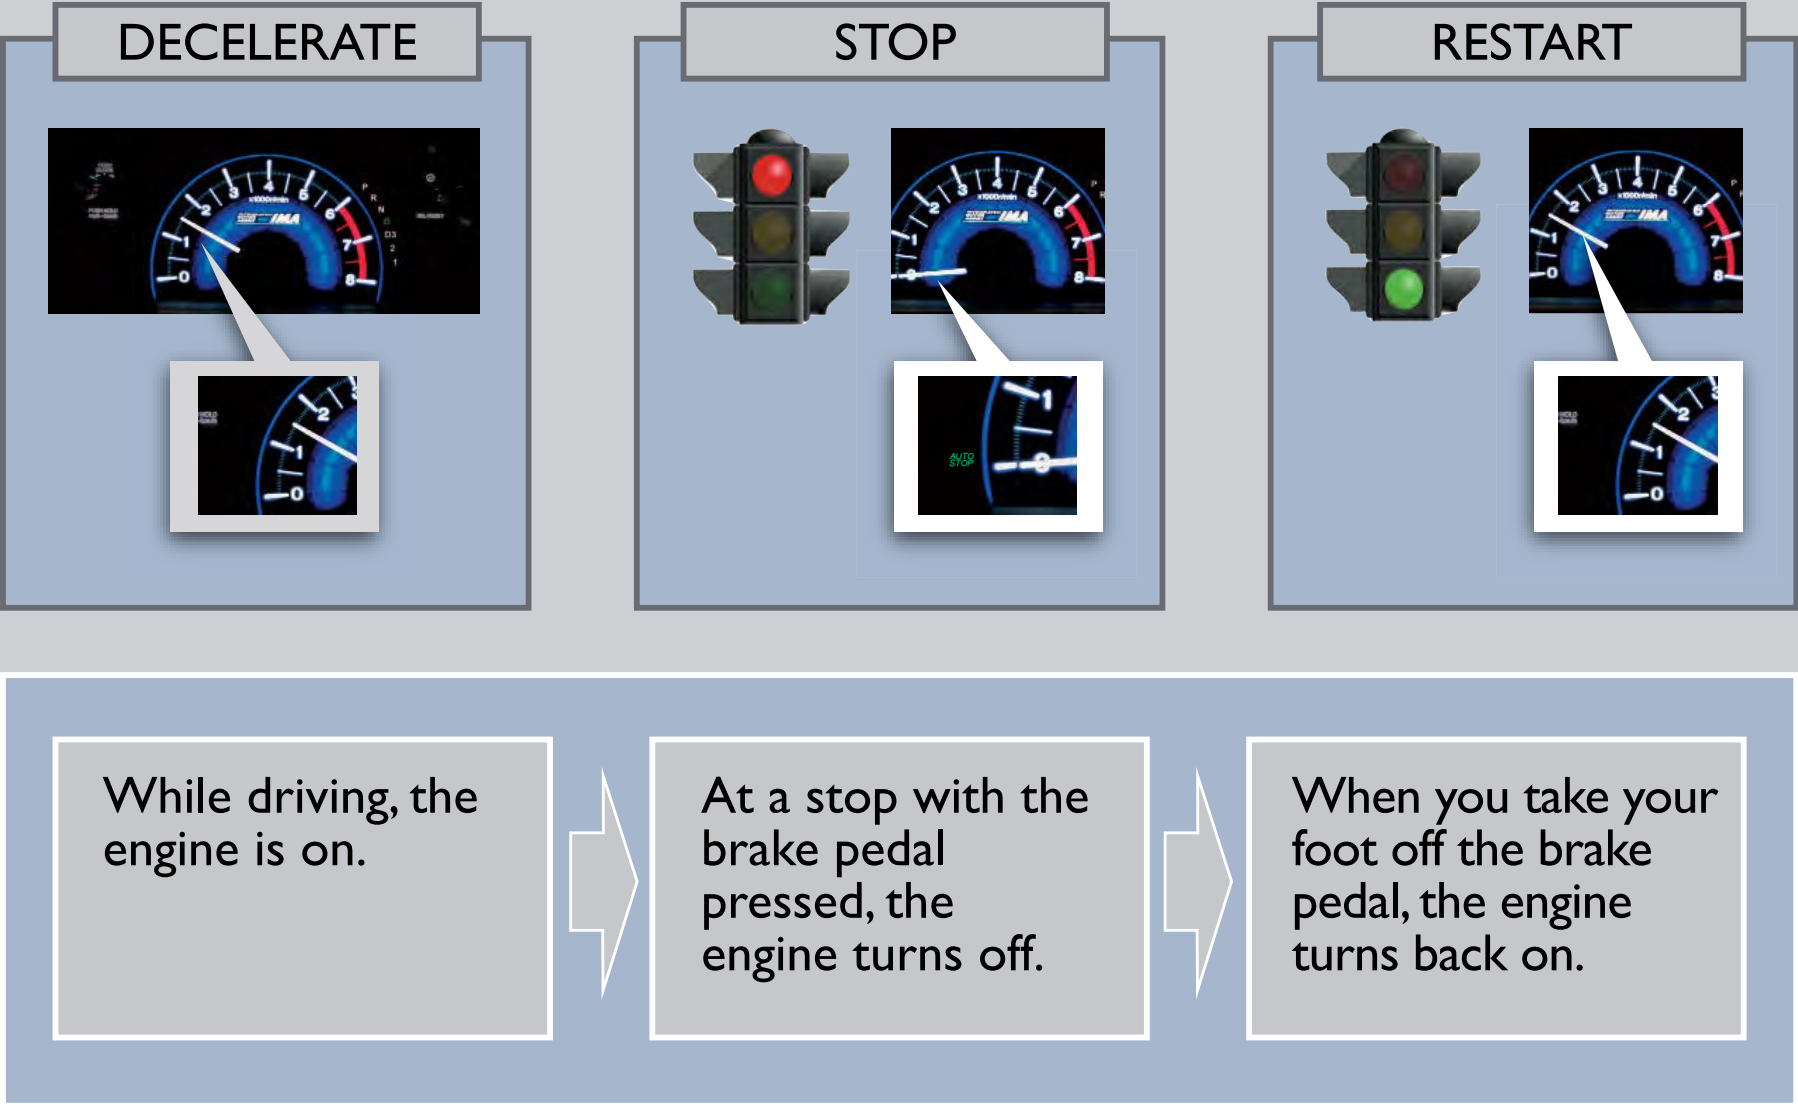

Note: Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.

Power Flow Monitor

Shows the status of the Integrated Motor Assist (IMA) system.

