



## INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Consists of several displays that provide you with useful information.

### Accessing the i-MID

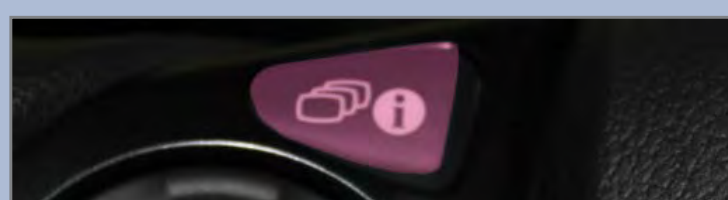


Press the Display/Info button to change main displays.

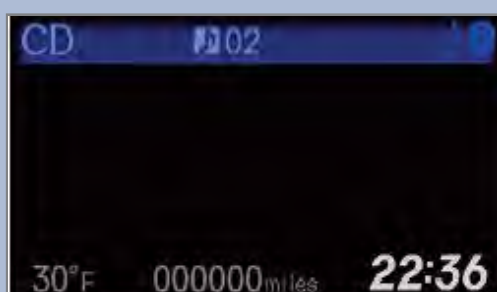

### Main Displays

Main display

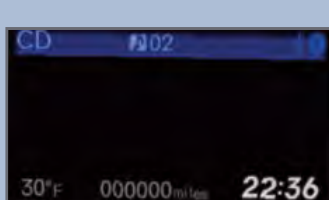

Power flow monitor



Clock  
(or wallpaper)



Ecological  
Drive  
Display




Audio display  
(or Phone  
display during  
call)



Trip  
computer\*



A warning or indicator message may appear as necessary. Press the Display/Info button to clear it.

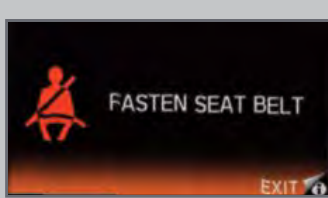


\*Press and hold the Display/Info button to enter the trip computer menu. Press Display/Info to scroll through range, elapsed time, and average speed.

### Sub-displays



Press the SEL/RESET button to change sub-displays.

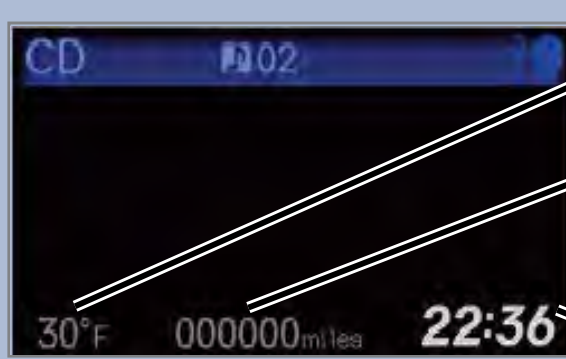

Outside  
temperature  
Odometer  
Trip A  
Trip B  
Clock

### Steering Wheel Controls

Use these buttons to operate the i-MID and the Vehicle Menu.



**(+) Button:**


Press to scroll upward in the Vehicle Menu.

**(◀) Button:**

Press to go back to the previous Vehicle Menu screen.

**(-) Button:**

Press to scroll downward in the Vehicle Menu.

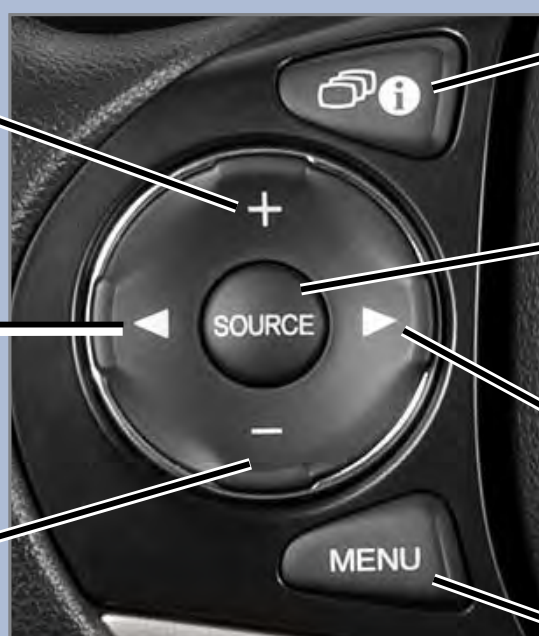

**Display/Information Button:**

Change i-MID displays.

**SOURCE Button:**

Press to enter a selection.

**(▶) Button:**

Press to go to the next Vehicle Menu screen.

**MENU Button:**

Press to go to Vehicle Menu for customization and other settings.