

BLUETOOTH® HANDSFREELINK® (HFL)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone.

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

How to Use HFL




Pick-Up button: Answer an incoming call, or go to a phone-specific voice portal.



Hang-Up/Back button: End a call, decline an incoming call, or cancel a selection.




Talk button: Make a call using a stored voice tag.

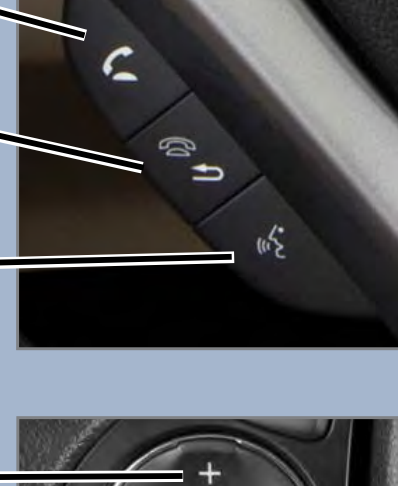

+/- buttons: Scroll the list.

SOURCE button: Press to enter a selection.

MENU button: From the phone screen, press and hold to display speed dial, call history, or redial.

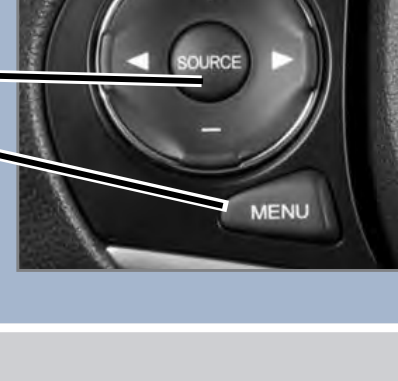

MENU: From the phone screen, select various call options.

BACK: Return to the previous screen.



Phone: Display the phone screen.

Settings: Display the settings screen and select Phone for phone pairing and more.

Pairing Your Phone

Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Touch items on the screen to make selections.


1. From the Home screen, select Settings.
2. Select Phone.
3. Select Bluetooth Device List.
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode and select OK.
6. HFL searches for your phone. Select your phone when it appears on the list.



If your phone does not appear: Select Phone Not Found and search for HandsFreeLink from your phone.



7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable options:

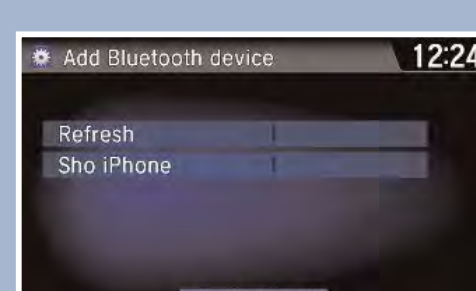

HondaLink Assist: Select On to enable emergency notification in the event of a collision.

Phone Synchronization: Select On to automatically import contacts and call history from your phone.



Dialing a Number

Enter a 10-digit phone number to call. Manual operation is limited while the vehicle is moving. Voice commands are always available.*

Touch items on the screen to make selections.

1. From the Home screen, select Phone.
2. Select MENU.
3. Select Dial.
4. Enter the phone number.
5. Select the green Dial icon to begin the call.



*To use voice commands to call a number at any time, press the Talk button from the voice portal screen and say "Call by number," followed by the entire phone number. For example, "3-1-0-5-5-1-2-3-4."

Using the Phonebook

When your phone is paired to the system, its entire phonebook can be automatically imported to the system. Phone synchronization must be on for this feature to work. Manual operation is limited while the vehicle is moving. Voice commands are always available.*

Touch items on the screen to make selections.

1. From the Home screen, select Phone.
2. Select MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want.
5. Select the entry to begin the call.



*To use voice commands to call a phonebook entry at any time, press the Talk button from the voice portal screen and say "Call by name," followed by the phonebook name and phone type. For example, "John Smith mobile."

Using Speed Dial or Call History

Store up to 20 speed dial entries, or view the last 20 calls for quick calling.

Touch items on the screen to make selections.


1. From the Home screen, select Phone.
2. Select a speed dial entry to call, or select Call History and a number. Scroll through the list if necessary.

For the full list of entries, select MENU and Speed Dial or Call History.




Receiving a Call


A notification is heard and the following screen appears:

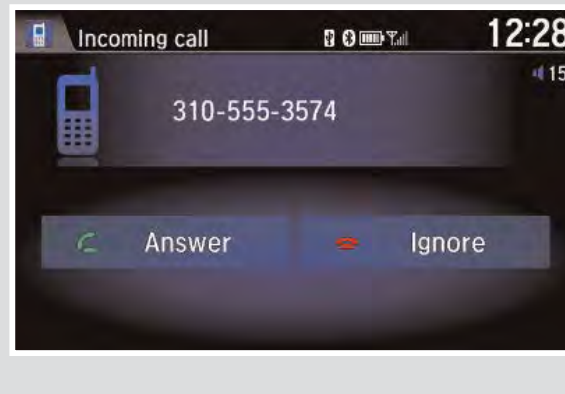

Press the Pick-Up button or select Answer on the screen to answer the call.

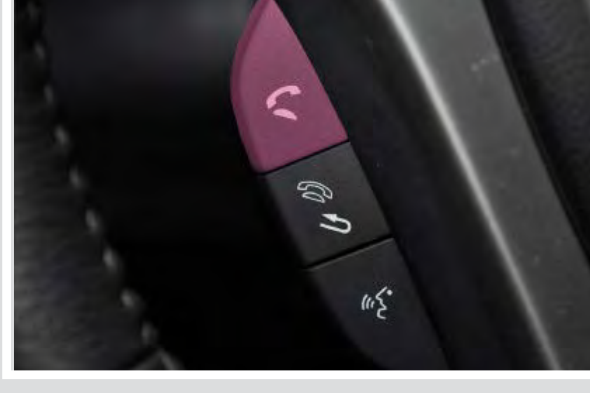

Press the Hang-Up/Back button or select Ignore on the screen to decline the call.

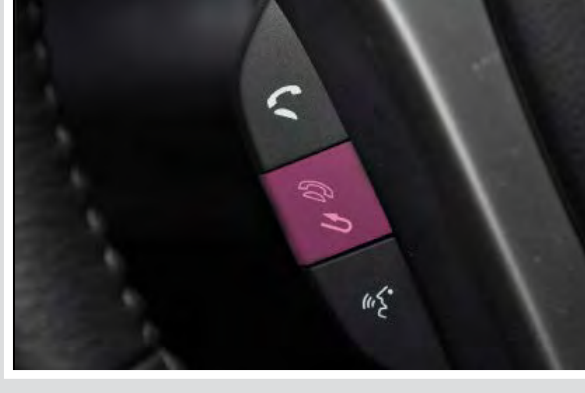

Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted