

# TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works




When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



If a message also appears on the i-MID, there may be a problem with the system. See your dealer.

## What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
4. Start TPMS calibration.

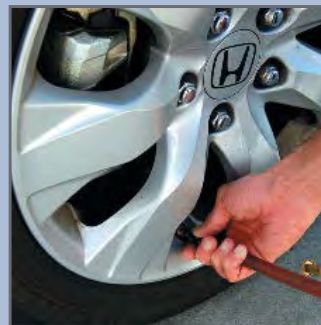

## TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system. Use the buttons on the steering wheel to operate the Vehicle Menu.

1. Press MENU.
2. Select Customize Settings.
3. Select TPMS Calibration.
4. Select Initialize.
5. Select Yes.

Calibration begins and will finish automatically. The process takes about 30 minutes of driving 30-60 mph.

6. Press MENU to exit.

