

 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer



Charging system



Anti-Lock Brake System (ABS)



 
Low brake fluid, Brake system



Electric Power Steering (EPS)



Low oil pressure



Malfunction indicator lamp (check engine light)



Supplemental Restraint System (SRS)



Vehicle Stability Assist® (VSA)



Transmission (*blinking*)



Tire Pressure Monitoring System (TPMS) (*blinks and stays on*)



Low temperature

Condition Indicators


Action is needed by driver



Parking brake on:
Release



Seat belt reminder:
Fasten seat belt(s)

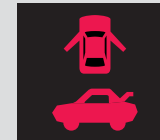

Door/Trunk open:
Close door(s) / trunk



High temperature:
Drive slowly or pull over



 
Low fuel:
Refill



Message indicator:
See i-MID



Low tire pressure:
Add air



Immobilizer (*blinks*):
Use other vehicle key and see dealer

On/Off Indicators



PASSENGER AIRBAG **OFF**
(next to i-MID)



Exterior lights **on**



VSA **OFF**



Turn signals/hazards **on**



CRUISE MAIN **on**



High beams **on**



CRUISE CONTROL **on**



ECON **on**