

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

Only the driver's door is preset to unlock when you:

- Shift into Park (P) for automatic transmission vehicles.
- Turn the ignition switch to LOCK (0) for manual transmission vehicles.

Changing Settings

Use the buttons on the steering wheel to operate the Vehicle Menu. See your Owner's Manual for a complete list of settings.

1. Press MENU.
2. Select Customize Settings.
3. Select Door Setup.
4. Select Auto Door Lock or Auto Door Unlock.
5. Select one of the options.
6. Press MENU to exit.



Note: The driver's and front passenger's door can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for unlocking the rear doors when either inner front door handle is pulled.