


MULTI-INFORMATION DISPLAY (MID)

Accessing the Multi-Information Display

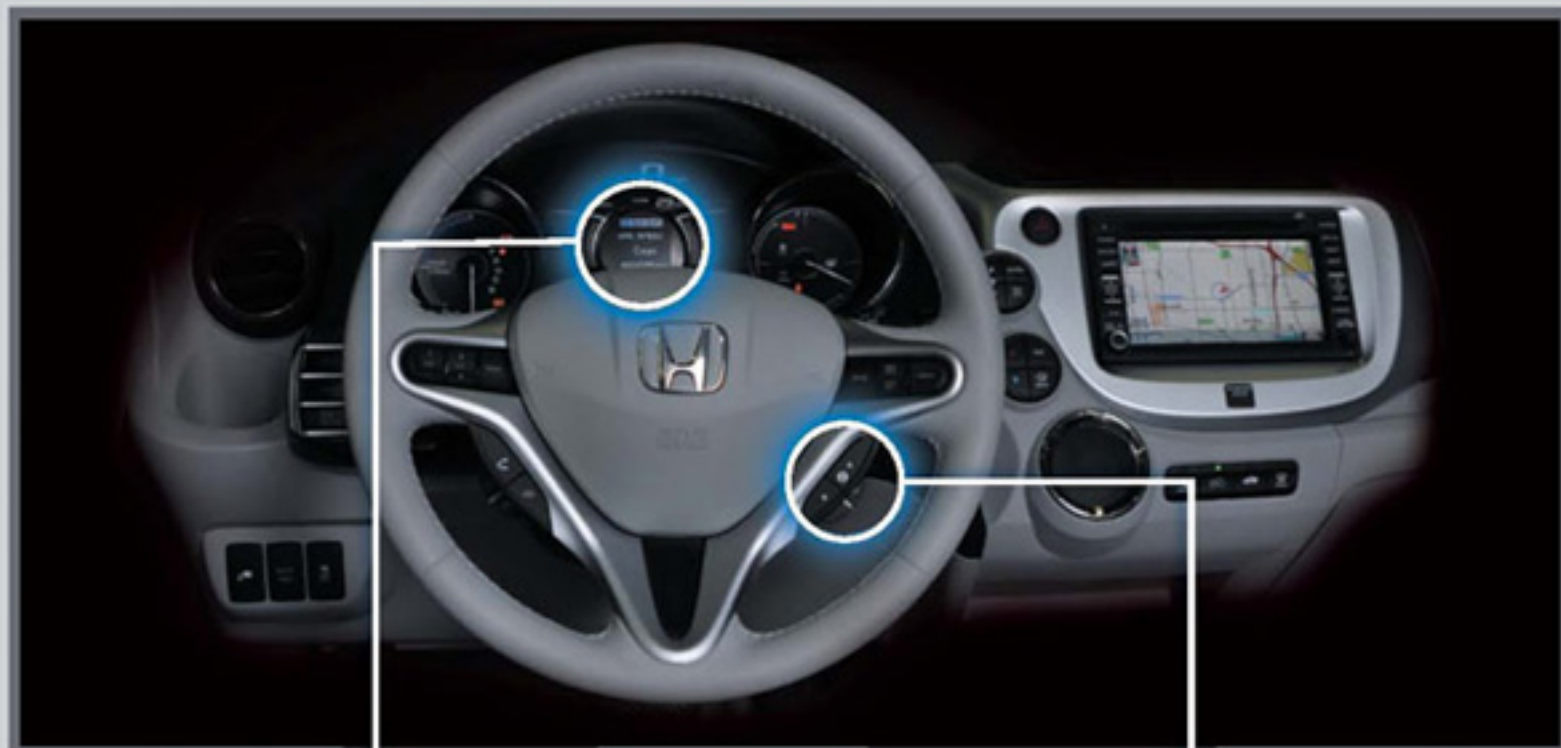

When you start the vehicle, the MID shows the main display.

002300 miles
73°F


To toggle between the MID displays:

- Press either Info button (▲/▼) for the main displays.
- Press SEL/RESET for the sub-displays.



Consists of several displays that provide you with useful information.

MID Main Displays

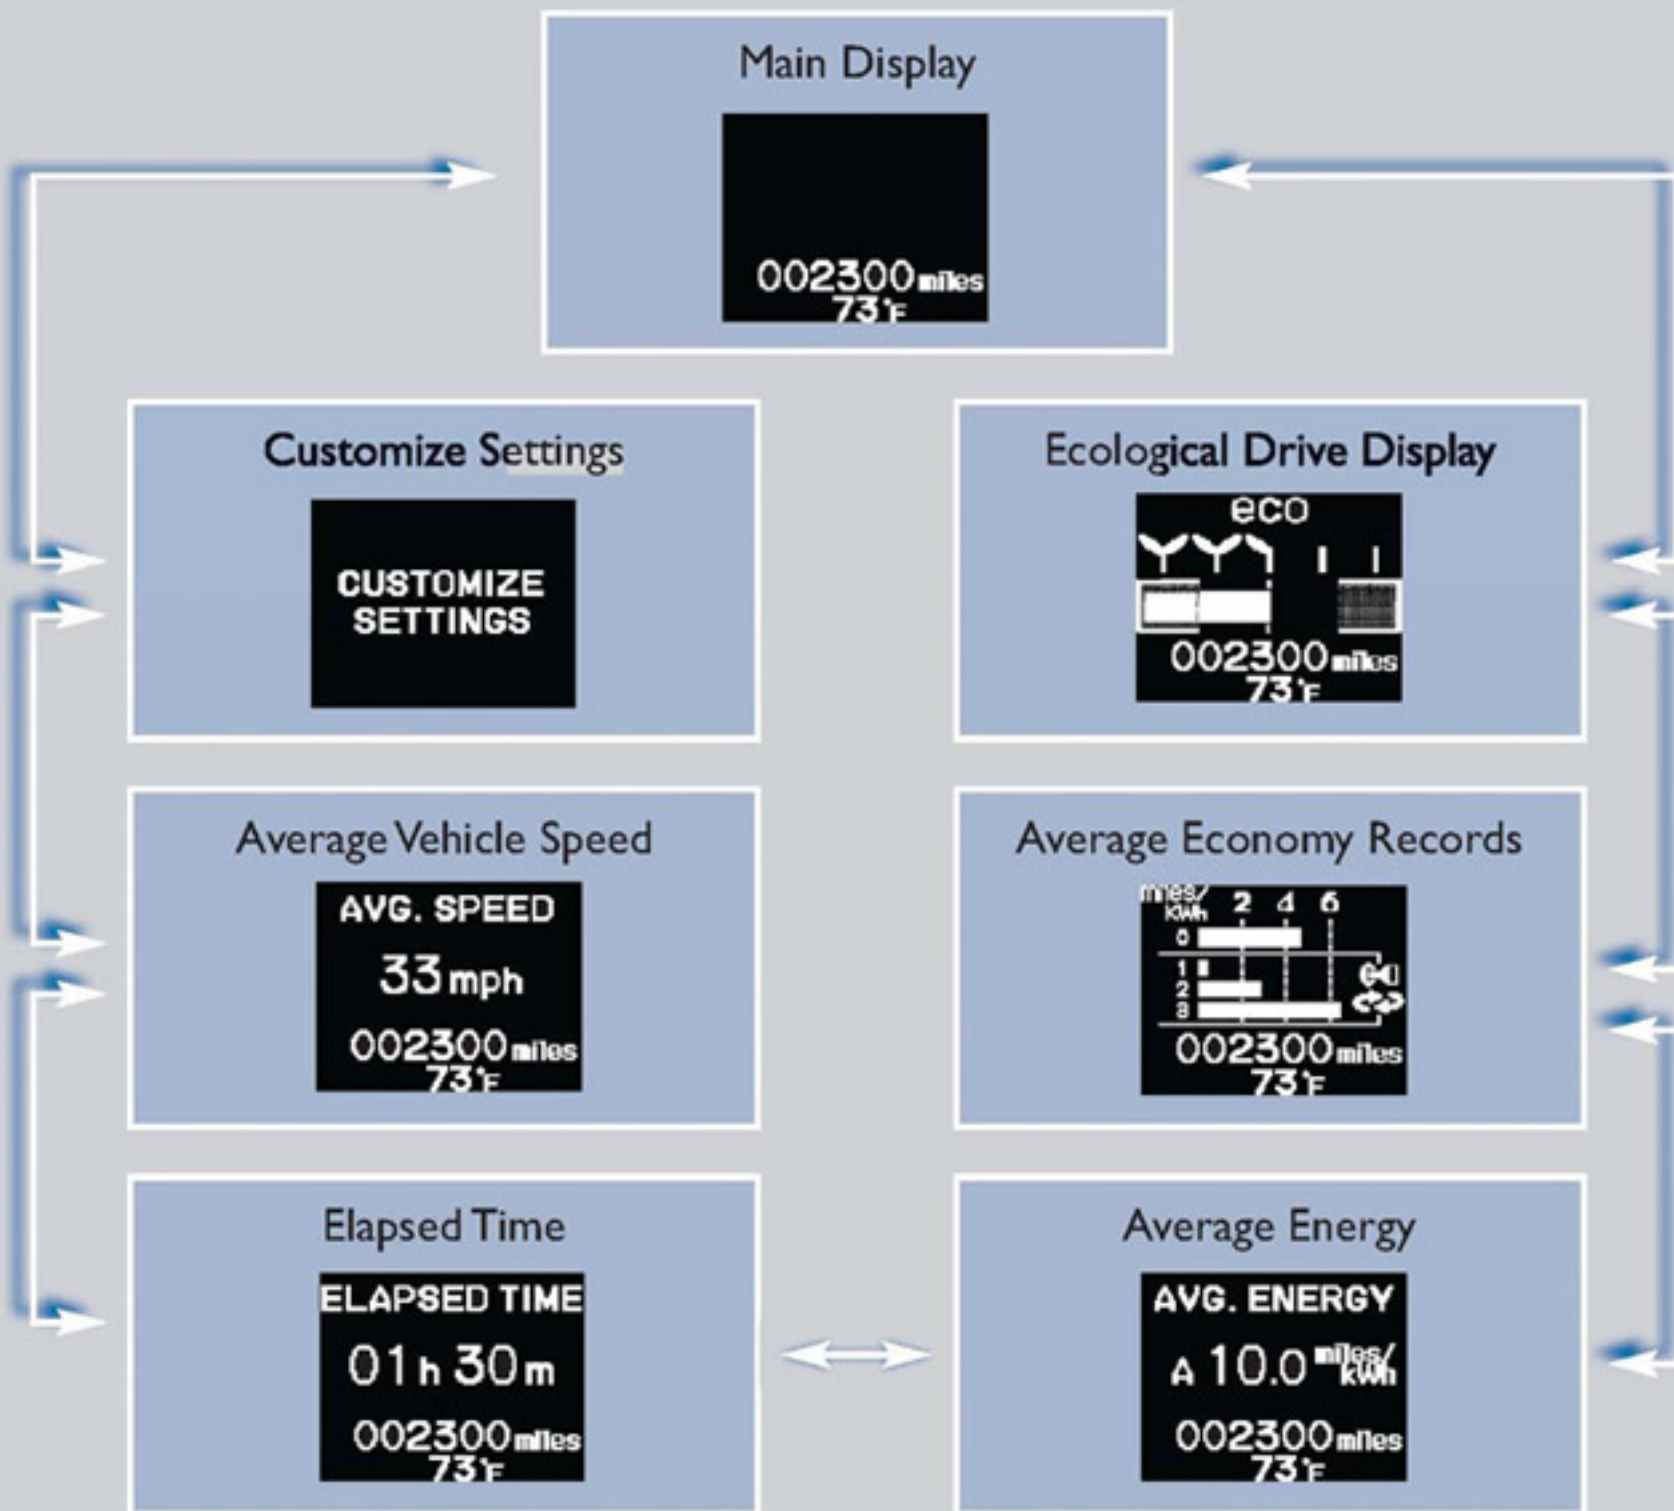

Sub-Displays

