

INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)


Choose what to display in the upper screen.

Changing the Display



Press the display button to change the main displays.


You can also press each display's corresponding button on the audio system.

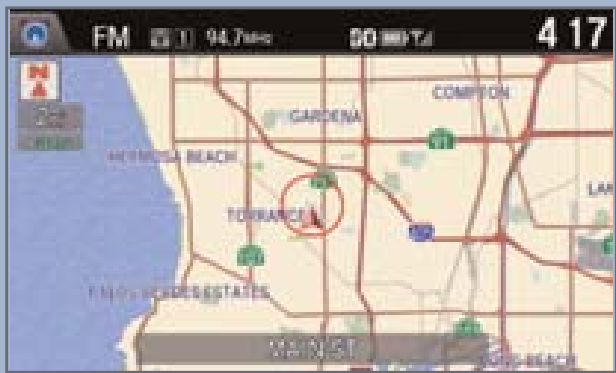

Display Options

Navigation

Shows map or navigation information.

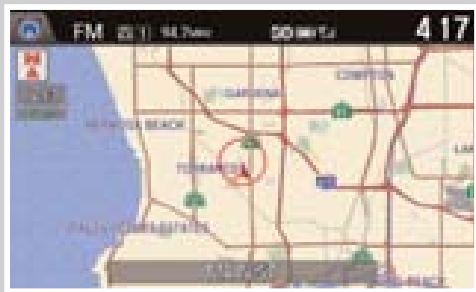

Phone

Shows phone screen.



Audio

Shows current audio information.



Info

Shows trip computer and other options.

