

# AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

## Door Locks



### Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

### Default Unlock Setting

All doors are set to unlock when the driver's door is opened.

## Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in ON mode. See your Owner's Manual for complete setting options.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Auto Door Lock or Auto Door Unlock.
4. Select from the options.
5. Press BACK to exit the menu.



**Note:** The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting.