
















INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.





Malfunction Indicators








If an indicator remains on, there may be a problem; see your dealer

	Starter system		Anti-Lock Brake System (ABS)
	Charging system		Malfunction lamp (check engine light)
	Low brake fluid		Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>)
	Low oil pressure		Vehicle Stability Assist® (VSA)
	Supplemental Restraint System (SRS)		Smart Entry System
	Electric Power Steering (EPS)		Automatic light control
	Forward Collision Warning (FCW)*		Brake system
	Lane Departure Warning (LDW)*		










Condition Indicators

Action is needed by driver

	Parking brake on: Release		Seat belt reminder: Fasten seat belt(s)
---	-------------------------------------	---	---

	Door/Trunk open: Close door(s) / trunk		Low tire pressure: Add air
	Low fuel: Refill		Maintenance Minder™: Make dealer appointment
	FCW (<i>blinks</i>)*: Brake		LDW (<i>blinks</i>)*: Stay in your lane
	Immobilizer (<i>blinks</i>): Use other vehicle key and see dealer		

On/Off Indicators

	PASSENGER AIRBAG OFF (next to display screen)		Fog lights on
	VSA OFF		Exterior lights on
	CRUISE MAIN on		Turn signals/hazards on
	CRUISE CONTROL on		High beams on
	ECON Mode on		

*if equipped