

## LANE DEPARTURE WARNING (LDW)



Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated. Available on EX-L.

### How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.



If you cross a lane line without using your turn signal, the LDW indicator flashes and a beep sounds.

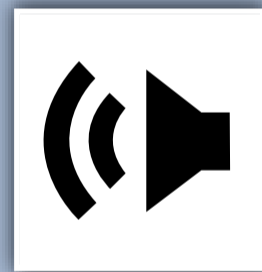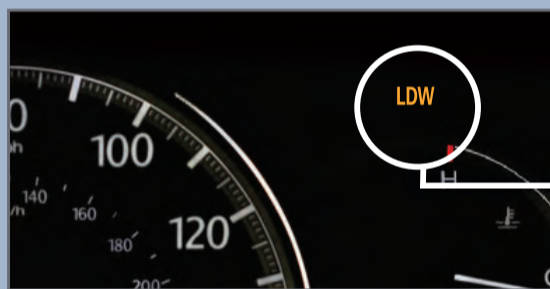

*LDW may not activate under certain conditions. See your Owner's Manual for more information.*

### Turning LDW On or Off

Press LDW to turn the system on or off. A green indicator light appears on the button when the system is on.

