SMART ENTRY WITH PUSH BUTTON START

Operate certain functions of your vehicle by simply having the remote transmitter within operating range.

Unlocking the Doors



Grab either one of the door handles when the vehicle is off. Wait until the doors unlock, then pull the handle to open.




Locking the Doors



Press the door lock button on either door handle when the vehicle is off.



Opening the Trunk

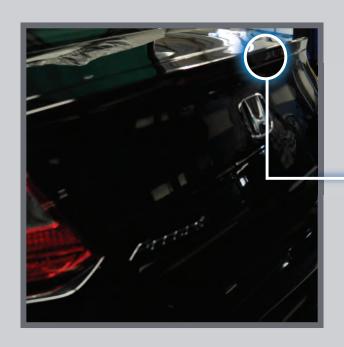


Press the trunk release button under the trunk handle.



Engine Start/Stop Button



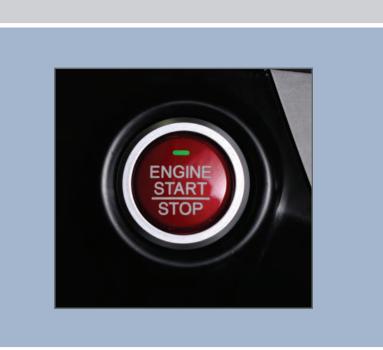

Accessory or On Mode

Press ENGINE START/STOP once without pressing the brake pedal for Accessory mode. Press it again for On mode.

Starting the Engine

Press and hold the brake pedal*, then press ENGINE START/STOP.

*For manual transmission, press and hold the clutch.

Turning the Vehicle Off

Shift to Park*, then press ENGINE START/STOP.

*For manual transmission, apply the parking brake.

Note: If you press ENGINE START/STOP and the shift lever is not in Park, the vehicle goes into Accessory mode.