


# TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

## How It Works

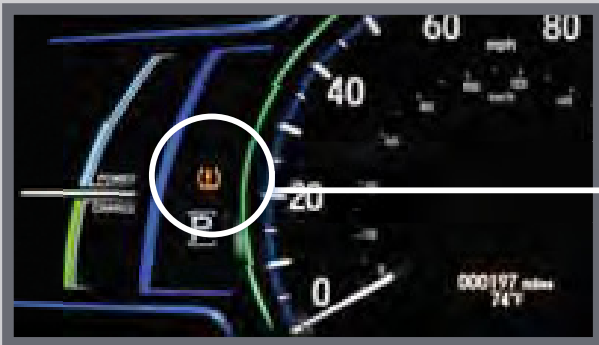

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

## What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
4. Start TPMS calibration.



## TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

1. Press **SETTINGS**. Use the selector knob to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **TPMS Calibration**.
4. Select **Calibrate**. The low tire pressure indicator blinks, and calibration begins.
5. Press **BACK** to exit the menu.



*You can also change vehicle settings using the multi-information display.*