
## Forward Collision Warning (FCW)\*

If the camera mounted between the windshield and the rearview mirror detects a vehicle in front of you when your vehicle speed is 10 mph (15 km/h) or higher—and it determines there is a likelihood of a frontal collision—the system provides you with visual and audible warnings.

If you do not brake in time or take preventive action, BRAKE appears in the display and a beep sounds continuously.

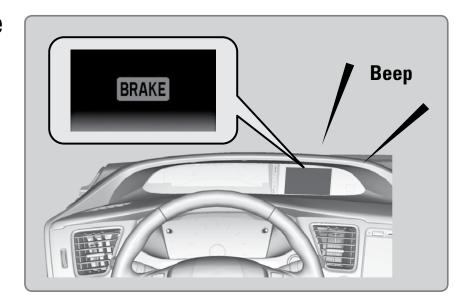

## Changing Settings

Determine the alert timing or turn the system off using Customize Settings menu in the Vehicle Menu in the i-MID. Use the steering wheel controls to make and enter selections.

- 1. Press the MENU button on the steering wheel.
- 2. Select Customize Settings.
- 3. Select Driving Support System Setup.
- 4. Select Forward Collision Warning Distance.
- 5. Select Long, Normal, Short, or Off.
- 6. Press MENU to exit the menu.

## **Important Safety Reminder**

FCW cannot detect all objects ahead and may not detect a given object; accuracy of the system will vary based on weather, speed, extreme interior heat, and other factors. FCW does not include a braking function. It is always your responsibility to safely operate the vehicle and avoid collisions.