

INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper screen.

Changing the Display




Press the Display button to change the main displays.



Display Options


Audio

Shows current audio information.

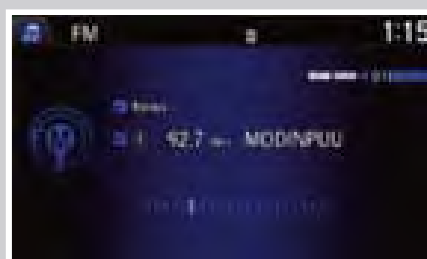

Current Drive


Shows instant fuel, average fuel, and range for the current drive.

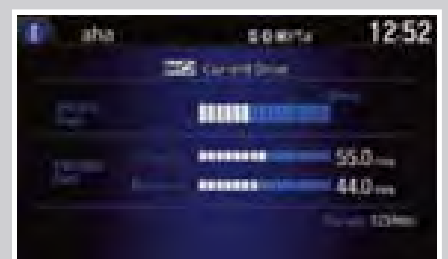

Clock


(or wallpaper)

Shows the clock or an imported image.*

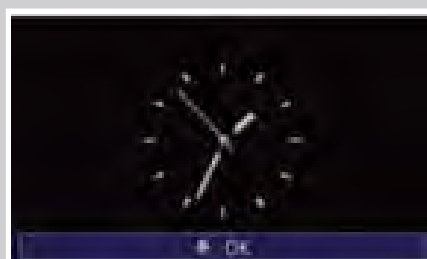

History of Trip A

Shows average fuel and distance for the current drive and past three drives.

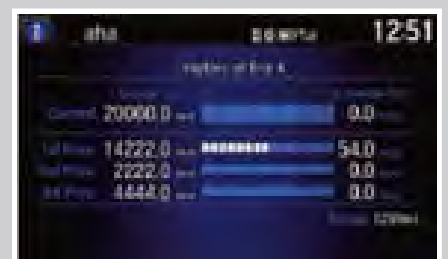

*See your Owner's Manual for instructions on how to upload a wallpaper image.